

How to confirm version

01/06 11:45:13
#019 S/S 1 LAYER 01 PROG 001 01:21
90.09 Å/S **2.91** % **0.866** KÅ
5 RATE CNST01 00:01 (1) 4.999MHz

#019 S/S 2 LAYER 01 PROG 002 01:21
19.2 Å/S **11.3** % **1.204** KÅ
5 RATE CNST01 00:01 (1) 4.999MHz

#019 S/S 3 LAYER 01 PROG 003 01:21
30.21 Å/S **8.49** % **2.098** KÅ
5 RATE CNST01 00:01 (1) 4.998MHz

#019 S/S 4 LAYER 01 PROG 004 01:21
40.63 Å/S **11.1** % **2.622** KÅ
5 RATE CNST01 00:01 (1) 4.997MHz
THKO SKIP NEXT PREV S.OPEN

☒1 Data of the display at the turning on

Press [MENU]key.

MENU

1. DATA DISPLAY
2. PROGRAM
3. CALC TOOLING & Z-RATIO
4. MATERIAL TABLE
5. MAINTENANCE

ENTER (1-5)

☒2 MENU screen

Press [5]key.

MAINTENANCE Ver. 1.11

1. FREQ. TEST
2. KEY TEST
3. DISP TEST
4. DI/O TEST
5. AO TEST
6. RS232C TEST
7. SS TEST
8. MEMORY INIT.
9. MEMORY CLEAR
10. MULTI LAYER INF.
11. MULTI LAYER CLEAR

ENTER(1 -11)

☒3 MAINTENANCE screen