

# ULVAC



CA72161372(251)

CA72161374(501)

## Instruction Manual (Original Instructions)

### ■ Oil-free Scroll Vacuum Pump

# DIS-251

# DIS-501

This instruction manual includes very important warnings, cautions and operating procedure in order to operate this pump safely and efficiently.  
Be sure to read this instruction manual thoroughly and fully understand before operation.  
After reading it, store it in a convenient place for immediate and future reading.

※Before use, be sure to fill in the blank spaces below for future repair and after-service.

Serial No.
Who sold it to you
Purchase date
When you began operation

## Important information

Be sure to read this instruction manual to understand how to operate equipment correctly. Only operators, who fully understand warnings, cautions and instructions, are to operate the equipment. Improper operation (mishandling) can cause serious bodily injury, death, fire or explosion.





Store this manual in a convenient place for immediate and future reference.




### ◆ Regarding safety

- The safety instructions given in this manual are the minimum operating requirements. Follow all national or municipal laws and regulations pertaining to fire, electricity, and other safety regulations, as well as corporate regulations.
- Pay special attention to items which are shown by the below marks and symbols.
- Symbols and marks have the following meanings.

### Examples of marks

	<b>WARNING</b>	Indicates a potentially hazardous situation which, if not avoided, may result in serious injury or loss of life.
	<b>CAUTION</b>	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or property damage.

### Examples of symbols

	Indicates [Beware]. We will explain briefly in or near the symbol. (The example on the left is [Beware of electric shock]).
	Indicates [Prohibited action]. We will explain briefly in or near the symbol. (The example on the left is [Do not touch]).
	Indicates [Required action]. We will explain briefly in or near the symbol. (The example on the left is [Be sure to ground]).

\* We shall not be responsible for any injury or damage caused by disregard of warnings, cautions or instructions.

### Supplementary notes

<b>Important</b>	Indicates notes which we ask you to observe. They are helpful to achieve full performance and functionality of the equipment.
------------------	---

## For safe operation

Below is very important information about how to safely operate the equipment.  
Before operation, be sure to read and fully understand the contents.



### WARNING

 <p><b>Be careful about lifting</b></p>	<p><b>Danger of cargo collapse</b></p> <p>Be careful to install vacuum pump using motor handle (DIS-251 mass 25kgs/1-phase, 23kgs/3-phase), or using motor eyebolt and crane with sufficient allowable load capacity (DIS-501 mass 44kgs/1-phase, 38kgs/3-phase) while paying attention to stability of suspended load. If not, it can cause damage, failure or bodily injury from falling cargo due to hoisting failure, or by being caught between suspended cargo and other material.</p>	 <p><b>Avoid moisture</b></p>	<p><b>Danger of electric shock</b></p> <p>Install in an area which is not exposed to moisture such as rain or steam. If moisture comes into and tact with the electric source connection, it can cause fire or bodily injury due to short-circuit or electric shock.</p>
 <p><b>Install at a safe site</b></p>	<p><b>Danger of explosion, fire and accident</b></p> <p>Install in an area free from explosive, flammable or corrosive substances. If not, it can cause explosion, fire or accident.</p>	 <p><b>Ask qualified electrician</b></p>	<p><b>Danger of short-circuit and electric shock</b></p> <p>Ask a qualified electrician to perform electric wiring. If not, short-circuit or electric shock can cause fire or bodily injury.</p>
 <p><b>Turn off electric source</b></p>	<p><b>Danger of electric shock and entanglement</b></p> <p>Be sure to turn off electric source on building site before wiring. If not, it can cause electric shock or bodily injury due to turning objects.</p>	 <p><b>Install overcurrent protective device</b></p>	<p><b>Danger of accident, fire and failure</b></p> <p>Be sure to install protective device to protect circuitry. We recommend overcurrent protective device (rated 15A for DIS-251 and rated 15A for DIS-501 (rated 20A 100/115V/1-phase)) to protect branch circuit. If equipment is not stopped in an emergency, it can cause accident, fire or failure.</p>
 <p><b>Install emergency stop switch</b></p>	<p><b>Danger of accident, fire or failure</b></p> <p>Be sure to install an electric source emergency stop switch (or protective device that can urgently stop). If equipment is not stopped in an emergency, it can cause accident, fire or failure.</p>	 <p><b>Install short circuit protective device</b></p>	<p><b>Danger of fire and electric shock</b></p> <p>Install short circuit protective device. If not, it can cause bodily injury due to fire or electric shock.</p>
 <p><b>Install motor protective circuit breaker to protect motor</b></p>	<p><b>Danger of electric fire and electric shock</b></p> <p>Install motor protective circuit breaker to protect motor. If not, bodily injury due to electric fire or electric shock can result. If you have any questions about the selection of protective devices, contact either our sales branches who sold it to you or local sales offices.</p>	 <p><b>Be careful about wiring</b></p>	<p><b>Danger of short-circuit and electric shock</b></p> <p>We recommend an electric source cable of more than <u>2mm<sup>2</sup> (more than rated 10A/1-phase, 7A/3-phase for DIS-251 and more than rated 18A/1-phase, 15A/3-phase for DIS-501) cross section area for electric source cable and earth cord.</u> Be careful to avoid voltage drop considering local situation. If not, it can cause a short-circuit fire and may result in bodily injury from electric shock.</p>

## For safe operation



### WARNING

 <b>Use crimp-style terminal</b>	<b>Danger of short-circuit and electric shock</b> Fit firmly proper round type crimp-style terminal to electric source cable using crimp tool and connect to motor terminal section. If not, it can cause short-circuit fire or bodily injury from electric shock due to looseness or disconnection.	 <b>Protect cable from being pulled</b>	<b>Danger of short-circuit and electric shock</b> Be sure to fit cable-gland to hole of $\phi 22\text{mm}$ at motor terminal box. If not, it can cause short-circuit fire or bodily injury from electric shock.
 <b>Protect cable from being pulled</b>	<b>Danger of short-circuit and electric shock</b> The power-supply conductor shall be free from strain including twisting by using cord anchorage, which is specified by the local electrical wiring regulation. If not, it can cause short-circuit fire or bodily injury from electric shock.	 <b>Be sure to ground</b>	<b>Danger of electric shock</b> Connect earth cord to earth terminal in motor terminal box. If not, it can cause bodily injury from electric shock.
 <b>With a thermal protector [Only single-phase motor]</b>	<b>Danger of restart</b> Be sure to switch off electric source before maintenance or inspection. Single-phase motor has a thermal protector. Vacuum pump restarts become cool without warning after vacuum pump.	 <b>Never evacuate hazardous gas</b>	<b>Danger of explosion and ignition</b> Do not evacuate gas which is hazardous to humans or explosive, flammable, or corrosive. Do not evacuate with substances containing chemicals, solvents, and powders. If done, it can cause failure or bodily injury by gas, explosion or ignition.
 <b>Avoid foreign matter</b>	<b>Danger of entanglement and foreign matter dispersal</b> Never put finger or foreign matter into air hole of fan cover, air hole of motor or clearance between FS(1) and FS(2) cooling fins. If done, it can cause bodily injury from entanglement with turning section, or foreign matter dispersal.	 <b>Never alter</b>	<b>Danger of electric shock and entanglement</b> Do not remove or alter safeguards or insulation parts. If done, it can cause bodily injury from electric shock or turning section and it can cause deteriorated performance and operating lifetime, and invalidate guarantee.
 <b>Change after vacuum pump is stopped</b>	<b>Danger of failure and bodily injury</b> Change air-flush port only after vacuum pump is stopped. If you change it during vacuum pump operation, it can cause vacuum pump failure and bodily injury.	 <b>Conduct periodical maintenance and inspection</b>	<b>Danger of failure and bodily injury</b> Conduct periodical maintenance and inspection. If not, it can cause insufficient performance, failure of vacuum pump, and bodily injury.
 <b>Be careful about high temperature</b>	<b>Danger of burns</b> Conduct maintenance and inspection only after vacuum pump becomes cool enough. Maintenance and inspection soon after vacuum pump stops can cause burn injury.	 <b>Turn off electric source</b>	<b>Danger of electric shock</b> Be sure to conduct maintenance and inspection after you turn off electric source. If not, it can cause bodily injury from electric shock or turning object.
 <b>Ask specialist to perform repairs</b>	<b>Danger of accident, failure and shorter operating lifetime</b> Ask specialist to perform repairs. Defective repairs can cause accident, failure or shorter operating lifetime.		

## For safe operation



## CAUTION



**Use at  
designated  
temperature**

### **Danger of overheating**

Operate at ambient temperature of 5°C ~40°C.  
Operating at a temperature range other than that designated can cause accident, failure or bodily injury such as burns due to overheating.



**Pay attention  
to ventilation**

### **Danger of overheating**

Install in a well-ventilated area.  
Poor ventilation can disrupt cooling and cause accident, failure or bodily injury such as burns since this vacuum pump is an air-cooled type.



**Avoid dust**

### **Danger of dust**

Be sure site is free from dust.  
Sucking in of dust can cause failure.



**Install on a  
solid, level  
floor**

### **Danger of unbalance**

Be sure to install on solid and level floor (less than 5° inclination).  
Uneven installation can cause failure and movement of vacuum pump. If installation floor is unstable, fix pump base with 4-φ11 holes of pump leg (DIS-251) or 4-M10 tap section pump base (DIS-501).



**Avoid direct  
sunlight**

### **Danger of overheating**

Install where equipment is not exposed to direct sunlight.  
Vacuum pump exposed to direct sunlight can overheat, resulting in failure.



**Check voltage**

### **Motor burnout**

Before doing any wiring, check electric source and voltage.  
Single-phase is a multi voltage type of AC100V/AC200V. Three-phase is a multi voltage type of AC200V/AC400V. Voltage can be changed at terminal block. This pump is wired to 200V when shipping from factory. Check your electric source, voltage, and cord correctly to terminal block.  
Improper wiring and incorrect voltage can cause motor burnout.



**Inspect cause of  
problem**

### **Danger of problem recurrence and failure**

If protective device or thermal protector activates, be sure to turn off electric source and inspect causes to solve the problem.  
Do not operate until problem is solved.  
Operation while problem is left unsolved can cause problem recurrence and failure.



**Remove blank  
flange**

### **Danger of exhaust disruption**

Remove blank flange from inlet and outlet.  
Operation with blank flange being fitted can disrupt air flow or cause blank flange to fly by exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects.



**Prevent foreign  
matter from  
entering**

### **Danger of foreign matter entering inlet**

When checking turning direction, be careful not to enter foreign matter into an inlet.  
Foreign matter entering inlet can cause failure.



**Pay attention to  
exhaust  
resistance**

### **Danger of exhaust disruption**

When connecting exhaust piping to vacuum pump and when combining piping with another vacuum pump, pay attention to piping size and length so that it does not cause exhaust resistance.  
Exhaust resistance can disrupt air flow, resulting in failure and over-current.



**Start or stop  
after closing  
isolation valve**

### **Danger of vacuum break and pollution**

Be sure to close isolation valve between vacuum pump and vacuum system (chamber) during start-up and stop.  
Start-up or stop with isolation valve in the open position can draw back gas and debris attached to inside of pump to vacuum chamber due to pressure differential, resulting in vacuum break and pollution on vacuum chamber side.



**Open air  
inlet**

### **Danger of abnormal sound and failure**

Open inlet to atmosphere for about 5 seconds before restarting vacuum pump.  
If not, it can unbalance temperature inside vacuum pump, resulting in failure.



## CAUTION


 <p><b>Beware temperature of intake gas</b></p>	<p><b>Danger of exceeding permissible temperature of intake gas</b></p> <p>If intake gas temperature is over 50°C, be sure to install a chiller or trap between vacuum pump and vacuum chamber so that gas intake temperature of vacuum pump keeps below 50°C. If not, vacuum pump temperature can increase, resulting in failure.</p>	 <p><b>Operate while opening air-flush port</b></p>	<p><b>Danger of remaining moisture</b></p> <p>When evacuating moisture, be sure to open air-flush port (air-flush opened operation). If you evacuate vapor while air-flush port is closed, condensed water will remain inside vacuum pump and cause failure.</p>
 <p><b>Caution after exhausting vapor</b></p>	<p><b>Danger of insufficient vapor exhaust</b></p> <p>After evacuating vapor, do air-flush opened operation for at least one hour. If you close air-flush port or stop vacuum pump soon after evacuating vapor, condensed water will remain inside vacuum pump which will cause failure.</p>	 <p><b>Beware of intake gas volume</b></p>	<p><b>Danger of exceeding permissible intake gas volume</b></p> <p>When sending N<sub>2</sub> gas or dry air into air-flush port, pressure should be the same as atmospheric pressure and flow rate should be less than 10L/min. If not, it can increase pressure inside vacuum pump, resulting in failure.</p>
 <p><b>Caution for frequent start/stop and short interval</b></p>	<p><b>Risk of motor malfunction</b></p> <p>Refrain from frequent start/stop operation. It induces malfunction of motor such as burn out. Please consult your distributor or factory representative for details. Appropriate operating mode with adequate interval and frequency of start/stop is varies owing to operating condition.</p>	 <p><b>Disposal</b></p>	<p>Dispose the pump and removed components safely in accordance with all national/local safety and environmental requirements. Particular care must be taken with the pump and components that have been contaminated with dangerous substances from the process.</p>
 <p><b>Disposal of the time counter</b></p>	<p>Never dump the time counter into the fire since the lithium battery is installed. Dispose the time counter according with your national/local safety and environmental requirements.</p>	 <p><b>Disposal of the lithium battery in the time counter</b></p>	<p>Dispose the lithium battery itself in the time counter according with your national/local safety and environmental requirements. Never dump the lithium battery into the fire. Dispose the battery covering the terminal (+,-) with insulating adhesive taps in order to avoid contact with other metallic materials which might occurs heat generation, explosion and ignition.</p>

# Where to attach warning stickers


## Where to attach warning stickers

Always keep warning stickers clean and legible. If they become dirty or detached, replace them with new ones. If you need replacement stickers, contact our sales branches who sold the vacuum pump to you.


DIS-251  
Single-phase

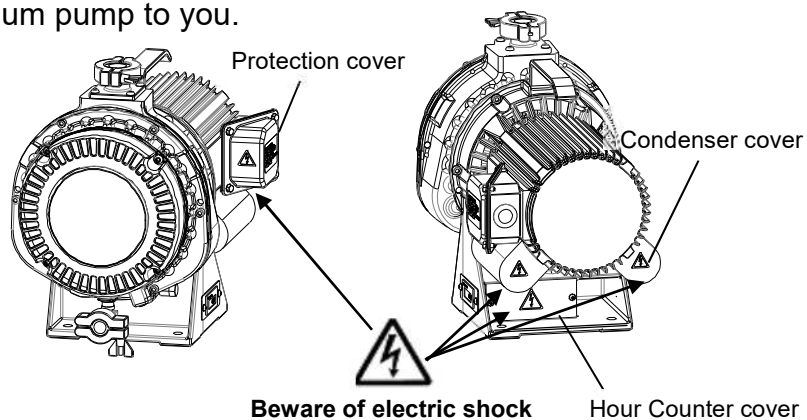


DIS-251  
Three-phase

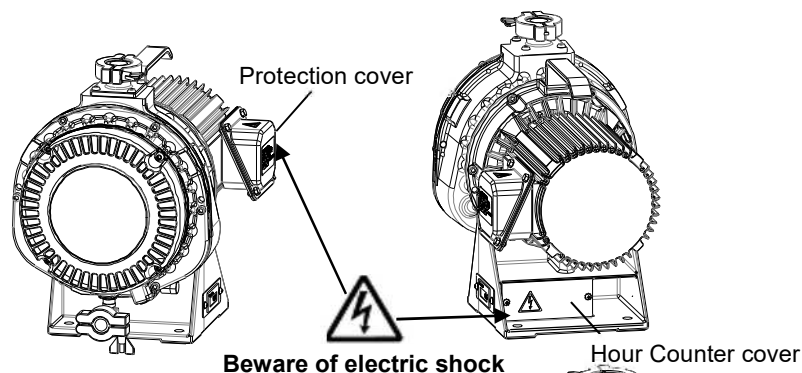

DIS-501  
Single-phase

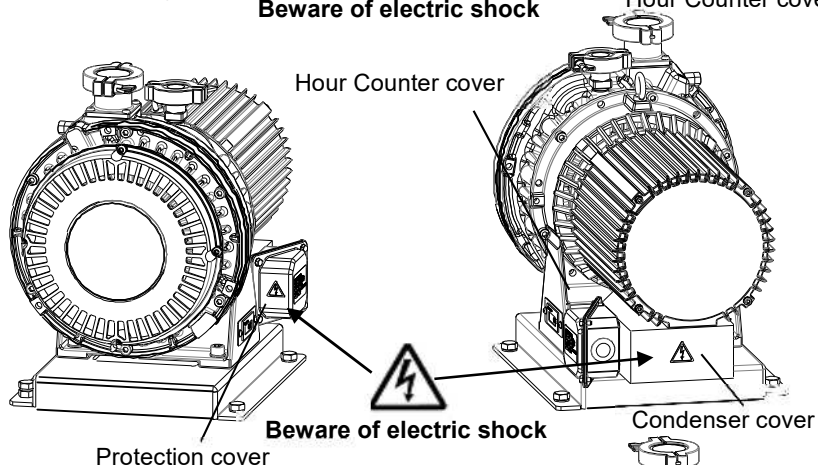

DIS-501  
Three-phase

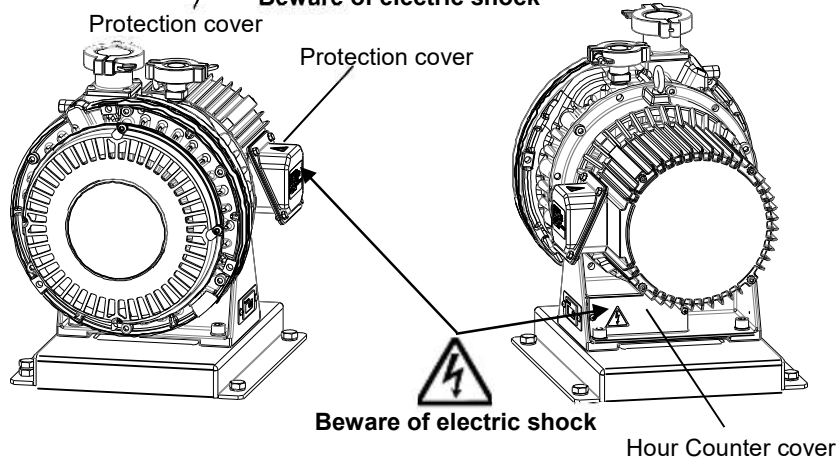

# Contents

Important information .....	1
For safe operation .....	2
Contents .....	7
1. Before use .....	8
1.1 Check the product .....	8
2. Name and structure of each section .....	11
3. Installation.....	12
3.1 Wiring.....	13
3.2 Test operation .....	17
3.3 Connection to vacuum system (chamber).....	18
4. Operation.....	19
4.1 Air-flush closed operation .....	21
4.1.1 Start-up .....	21
4.1.2 Shut-down.....	21
4.2 Air-flush opened operation.....	22
4.2.1 Preparation .....	22
4.2.2 Start-up and shut-down.....	23
4.2.3 When returning to air-flush closed operation .....	23
5. Maintenance and inspection .....	25
5.1 Daily maintenance and inspection .....	25
5.2 Maintenance .....	26
6. Problems and remedies.....	27
7. Disposal.....	27
8. Specifications .....	28
8.1 Specifications .....	28
8.1.1 DIS-251 .....	28
8.1.2 DIS-501 .....	29
8.2 Dimensions .....	30
8.2.1 DIS-251 .....	30
8.2.2 DIS-501 .....	30
8.3 Performance data .....	31
9. Warranty and After-sales service .....	32
9.1 Warranty .....	32
9.2 After-sales and service .....	32
Vacuum Pump Check Sheet For Repair .....	33



# 1. Before use

## 1.1 Check the product


- Check that the package is right-side-up before opening.
- Check that the model of the product is the same as the one you ordered.

How to read model name


DIS : model

<u>D</u>	<u>I</u>	<u>S</u>	-	<u>2</u>	<u>5</u>	<u>1</u>
<u>D</u>	<u>I</u>	<u>S</u>	-	<u>5</u>	<u>0</u>	<u>1</u>


Displacement (swept volume)  
251 : 250 L/min at 50Hz Motor  
501 : 500 L/min at 50Hz Motor

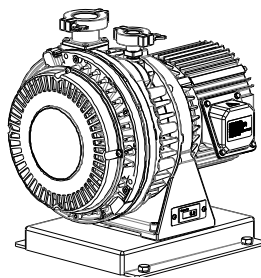


DIS-501 (Three-phase)

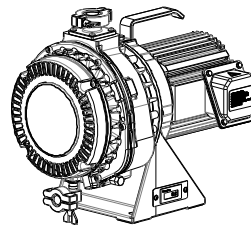

DIS-251 (Three-phase)

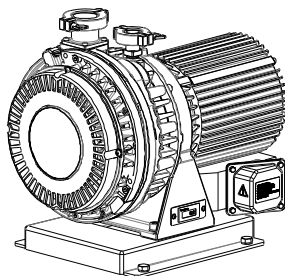

DIS-501 (Single-phase)

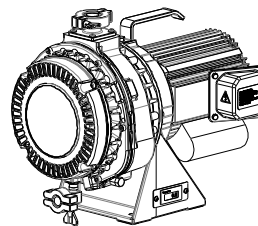

DIS-251 (Single-phase)

- **Check that there is no damage.**

If there is any damage, contact either our sales branches who sold it to you or local sales offices.


- **Check the following accessories.**

Instruction manual (this one)


Air-muffler for air-flush

(DIS-251 is attached to handle of motor. DIS-501 is attached to eyebolt of motor.)

• DIS-251

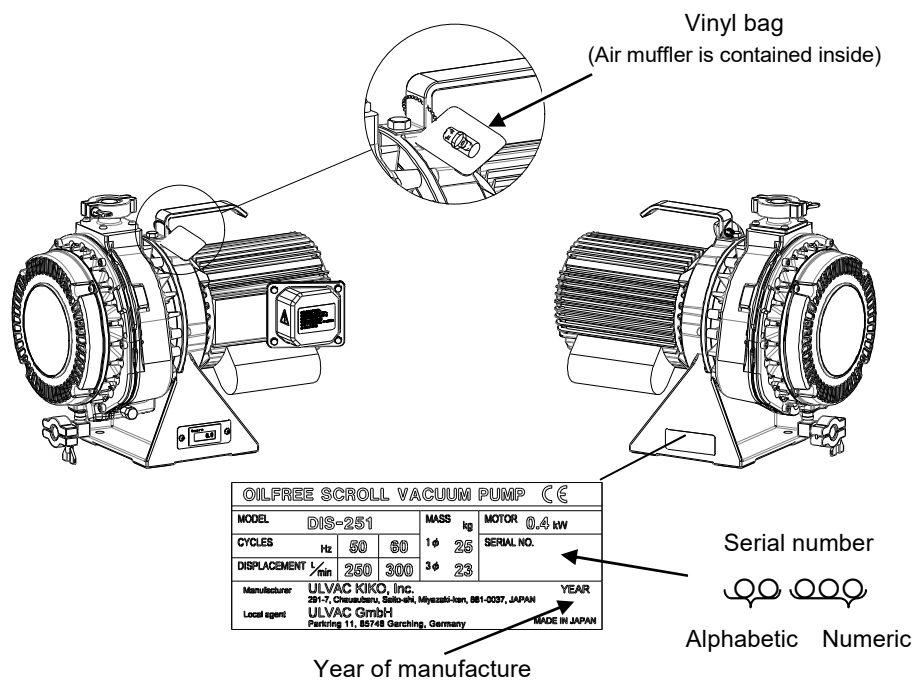

• DIS-501

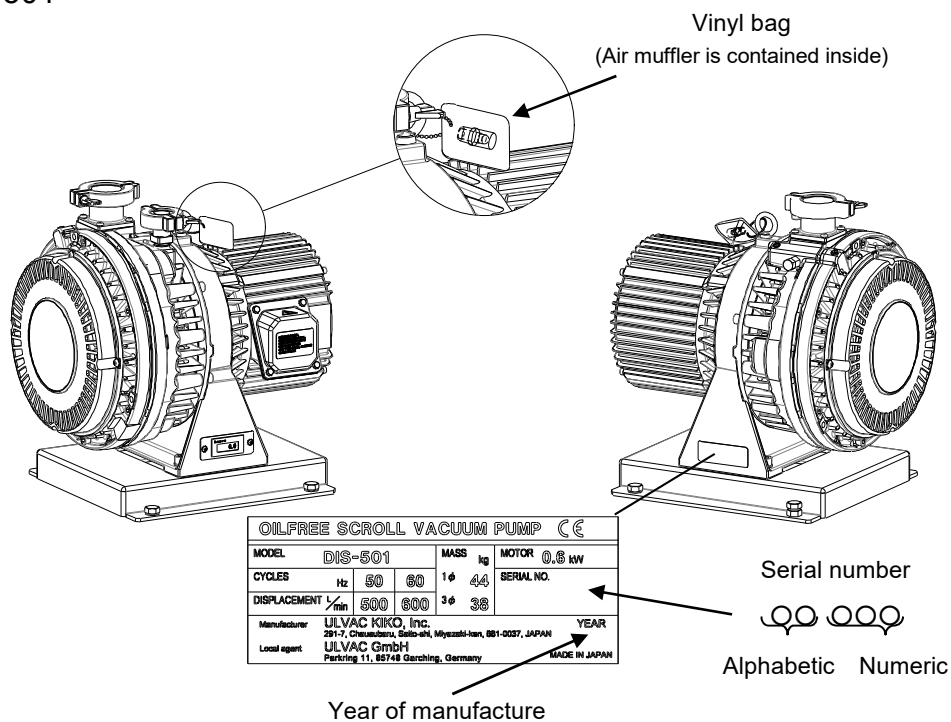

※Please prepare electric source cables, crimp-style terminal, electric source protective devices, piping to inlet, and piping from outlet on customer side.

## Open package



### WARNING


#### Danger of cargo collapse

Be careful to install vacuum pump using motor handle (DIS-251 mass 25kgs/1-phase, 23kgs/3-phase), or using motor eyebolt and crane with sufficient allowable load capacity (DIS-501 mass 44kgs/1-phase, 38kgs/3-phase) while paying attention to stability of suspended load.

If not, it can cause damage, failure or bodily injury from falling cargo due to hoisting failure, or by being caught between suspended cargo and other material.




Be careful about  
lifting

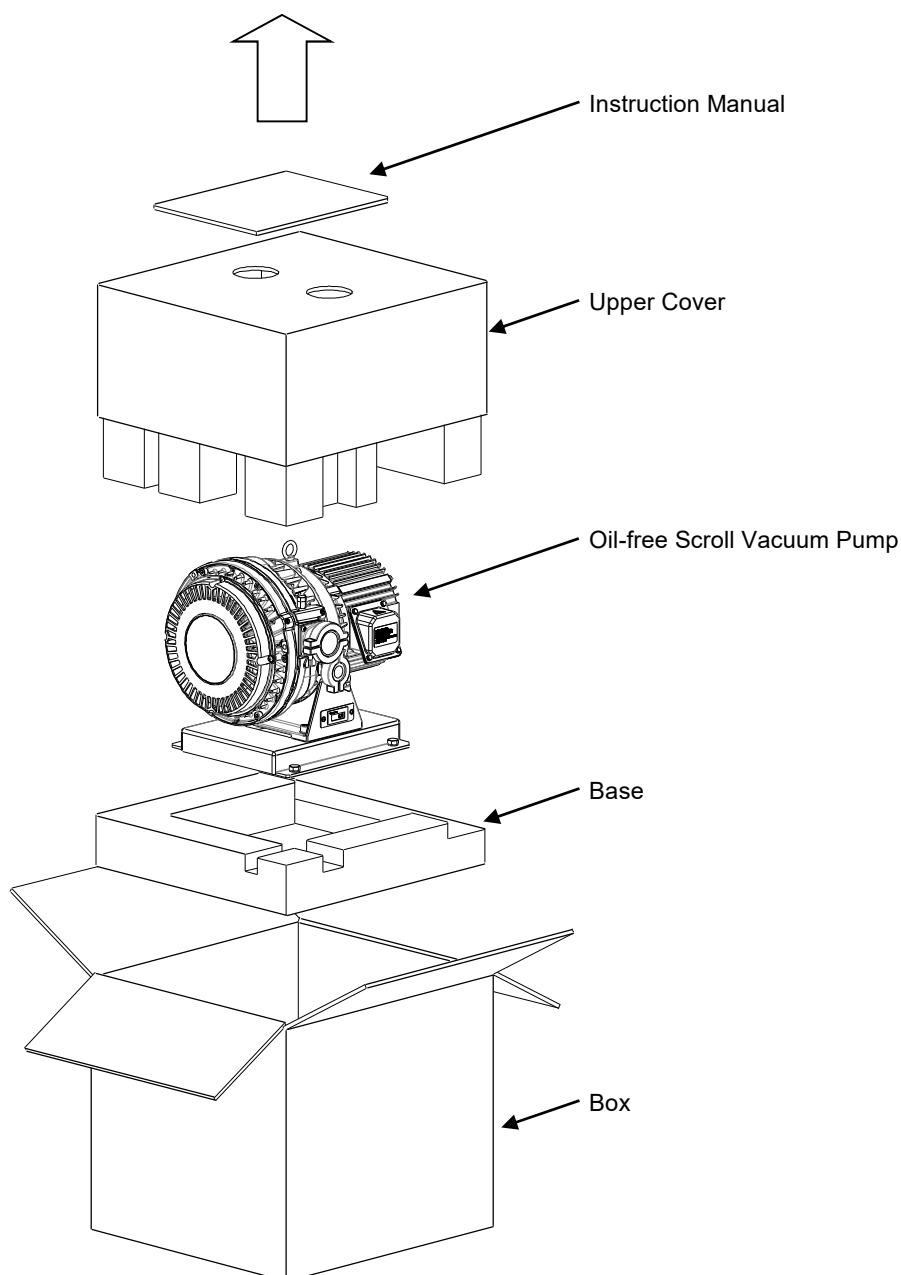



## 2. Name and structure of each section

### • DIS-251

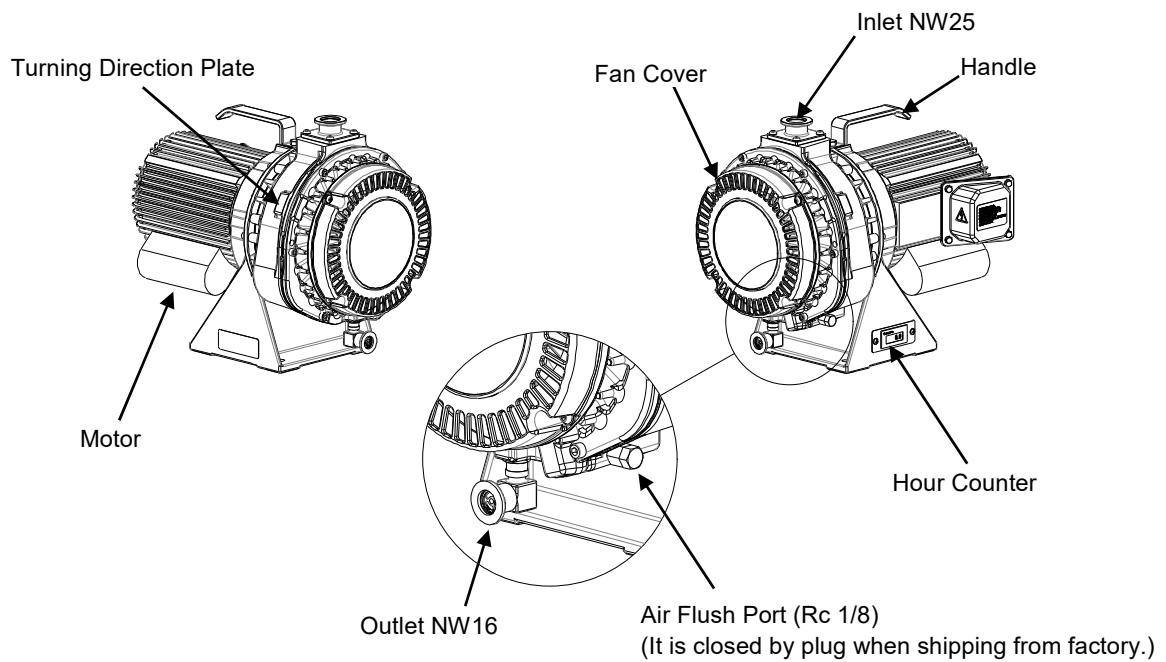



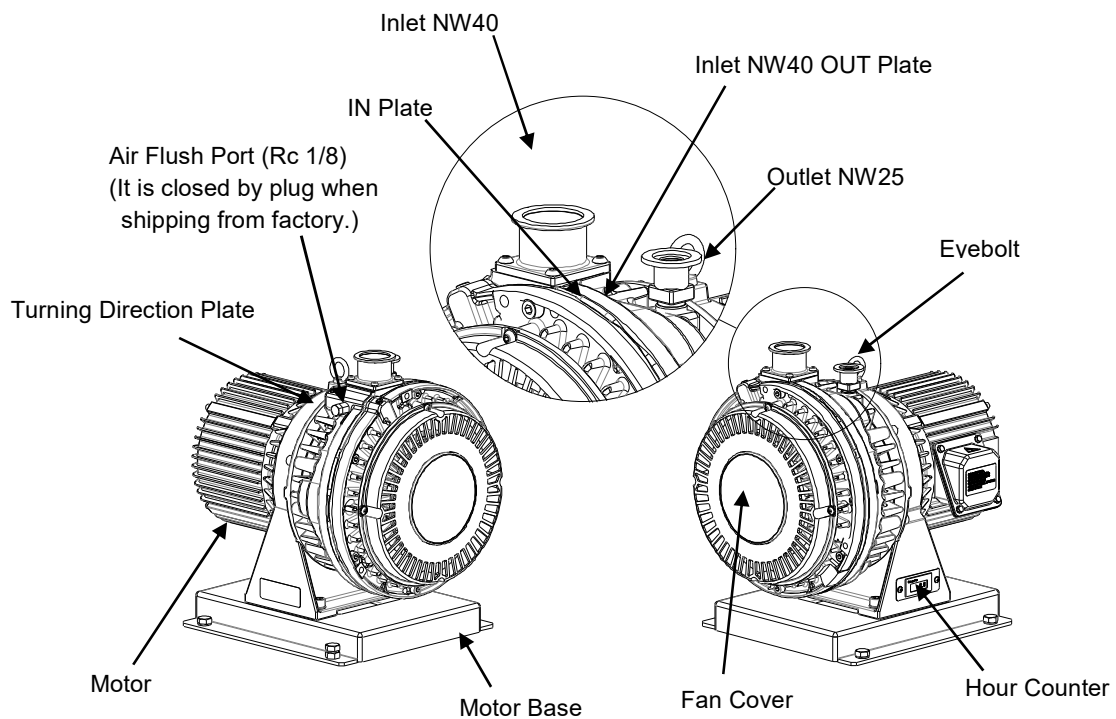

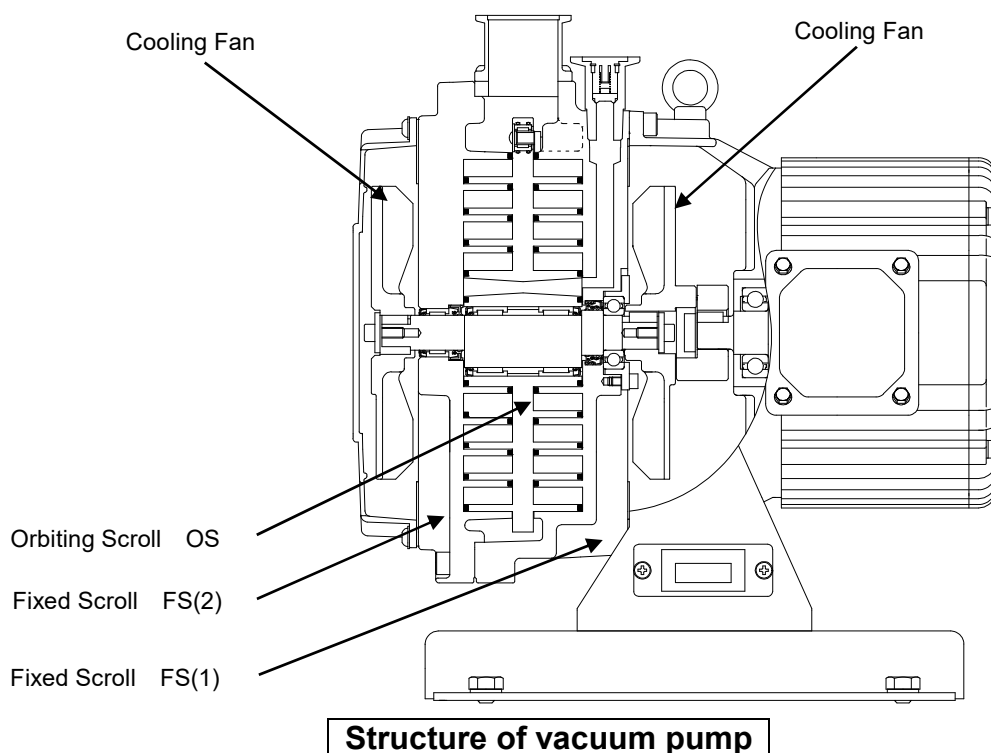


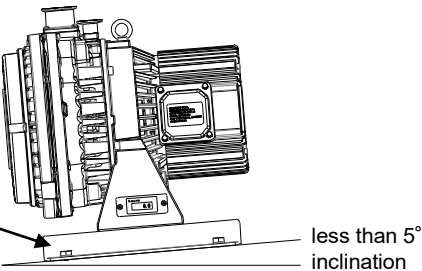


### • DIS-501


















### 3. Installation

 <b>WARNING</b>							
<b>Danger of electric shock</b> <b>Install in an area which is not exposed to moisture such as rain or steam.</b> If moisture comes into and tact with the electric source connection, it can cause fire or bodily injury due to short-circuit or electric shock.	 <b>Avoid moisture</b>						
<b>Danger of explosion, fire or accident</b> <b>Install in an area free from explosive, flammable or corrosive substances.</b> If not, it can cause explosion, fire or accident.	 <b>Install at a safe site</b>						
 <b>CAUTION</b>							
<b>Danger of overheating</b> <b>Operate at ambient temperature of 5°C~40°C.</b> Operating at a temperature range other than that designated can cause accident, failure or bodily injury such as burns due to overheating.	 <b>Use at designated temperature</b>						
<b>Danger of overheating</b> <b>Install in a well-ventilated area (refer to below chart).</b> Poor ventilation can disrupt cooling and cause accident, failure or bodily injury such as burns since this vacuum pump is an air-cooled type. <table border="1" data-bbox="333 1908 943 2013"> <thead> <tr> <th colspan="2">Necessary ventilated air volume</th></tr> <tr> <th>DIS-251</th><th>DIS-501</th></tr> </thead> <tbody> <tr> <td>Over 4 m<sup>3</sup>/min</td><td>Over 8 m<sup>3</sup>/min</td></tr> </tbody> </table>	Necessary ventilated air volume		DIS-251	DIS-501	Over 4 m <sup>3</sup> /min	Over 8 m <sup>3</sup> /min	 <b>Pay attention to ventilation</b>
Necessary ventilated air volume							
DIS-251	DIS-501						
Over 4 m <sup>3</sup> /min	Over 8 m <sup>3</sup> /min						

<b>Danger of dust</b> <b>Be sure site is free from dust.</b> Sucking in of dust can cause failure.	 <b>Avoid dust</b>
<b>Danger of unbalance</b> <b>Be sure to install on solid and level floor (less than 5° inclination).</b> Uneven installation can cause failure and movement of vacuum pump. If installation floor is unstable, fix pump base with 4-φ 11 holes of pump leg (DIS-251) or 4-M10 tap section pump base (DIS-501). <div style="text-align: center;">  </div>	 <b>Install on a solid, level floor</b>
<b>Danger of overheating</b> <b>Install where equipment is not exposed to direct sunlight.</b> Vacuum pump exposed to direct sunlight can overheat, resulting in failure.	 <b>Avoid direct sunlight</b>
<b>Important</b>	
When building vacuum pump into vacuum system, pay attention to space for maintenance, ambient temperature and piping. Be sure to fix vacuum pump on solid and level floor. If you have any questions, contact our sales branches who sold it to you or local sales offices.	

## 3.1 Wiring

 <b>WARNING</b>	
<b>Danger of short-circuit and electric shock</b> <b>Ask a qualified electrician to perform electric wiring.</b> If not, short-circuit or electric shock can cause fire or bodily injury.	 <b>Ask qualified electrician</b>
<b>Danger of electric shock and entanglement</b> <b>Be sure to turn off electric source on building site before wiring.</b> If not, it can cause electric shock or bodily injury due to turning objects.	 <b>Turn off electric source</b>
<b>Danger of accident, fire and failure</b> <b>Be sure to install protective device to protect circuitry. We recommend overcurrent protective device (rated 15A for DIS-251 and rated 15A for DIS-501 (rated 20A 100/115V/1-phase)) to protect branch circuit.</b> If equipment is not stopped in an emergency, it can cause accident, fire or failure.	 <b>Install overcurrent protective device</b>
<b>Danger of accident, fire or failure</b> <b>Be sure to install an electric source emergency stop switch (or protective device that can urgently stop).</b> If equipment is not stopped in an emergency, it can cause accident, fire or failure.	 <b>Install emergency stop switch</b>
<b>Danger of fire and electric shock</b> <b>Install short circuit protective device.</b> If not, it can cause bodily injury due to fire or electric shock.	 <b>Install short circuit protective device</b>

<p><b>Danger of electric fire and electric shock (refer to chart 1 on page 15)</b></p> <p><b>Install motor protective circuit breaker to protect motor.</b>          If not, bodily injury due to electric fire or electric shock can result.          If you have any questions about the selection of protective devices, contact either our sales branches who sold it to you or local sales offices.</p>	 <p><b>Install motor protective circuit breaker to protect motor</b></p>
<p><b>Danger of short-circuit and electric shock</b></p> <p><b><u>We recommend an electric source cable of more than 2mm<sup>2</sup> (more than rated 10A/1-phase, 7A/3-phase for DIS-251 and more than rated 18A/1-phase, 15A/3-phase for DIS-501) cross section area for electric source cable and earth cord.</u></b>  <b>Be careful to avoid voltage drop considering local situation.</b>          If not, it can cause a short-circuit fire and may result in bodily injury from electric shock.</p>	 <p><b>Be careful about wiring</b></p>
<p><b>Danger of short-circuit and electric shock</b></p> <p><b>Fit firmly proper round type crimp-style terminal to electric source cable using crimp tool and connect to motor terminal section.</b>          If not, it can cause short-circuit fire or bodily injury from electric shock due to looseness or disconnection.</p>	 <p><b>Use crimp-style terminal</b></p>
<p><b>Danger of short-circuit and electric shock</b></p> <p><b>Be sure to fit cable-gland to hole of <math>\phi 22\text{mm}</math> at motor terminal box.</b>          If not, it can cause short-circuit fire or bodily injury from electric shock.</p>	 <p><b>Protect cable from being pulled</b></p>
<p><b>Danger of short-circuit and electric shock</b></p> <p><b>The power-supply conductor shall be free from strain including twisting by using cord anchorage, which is specified by the local electrical wiring regulation.</b>          If not, it can cause short-circuit fire or bodily injury from electric shock.</p>	 <p><b>Protect cable from being pulled</b></p>
<p><b>Danger of electric shock</b></p> <p><b>Connect earth cord to earth terminal in motor terminal box.</b>          If not, it can cause bodily injury from electric shock.</p>	 <p><b>Be sure to ground</b></p>
<p><b>Danger of restart</b></p> <p><b>Be sure to switch off electric source before maintenance or inspection.</b>  <b>Single-phase motor has a thermal protector.</b>          Vacuum pump restarts become cool without warning after vacuum pump.</p>	 <p><b>With a thermal protector [Only single-phase motor]</b></p>
<p><b>CSA Requirement</b></p> <p>Single-phase motor          Thermally protected automatic reset. TYPE TP212. Motor restart without warning after protector trip.</p> <p>Three-phase motor          Motor not protected. External overheat protection in accordance with Canadian Electric Code Part I [C22.1], must be provided.          Min. circuit ampacity of conductor is          DIS-251 – 1-phase 10A /3-phase 7A, DIS-501 – 1-phase 18A /3-phase 15A          Max. branch circuit breaker is          DIS-251 – 15A, DIS-501 – 15A (1-phase 100/115V is 20A)</p> <p><b>When you used this pump in Europe.</b></p> <p>This vacuum pump must be equipped with a main disconnect device in accordance with requirements of EN60204-1, clause 5.3.2. It is recommended to use a circuit breaker as main breaker which is suitable for isolation according to EN60947-2 and is equipped with an operating handle which is lockable in OFF position and complies with the other requirements of EN60204-1, clause 5.3.</p>	



## CAUTION

### Motor burnout

Before doing any wiring, check electric source and voltage.

Single-phase is a multi voltage type of AC100V/AC200V. Three-phase is a multi voltage type of AC200V/AC400V.

Voltage can be changed at terminal block.

This pump is wired to 200V when shipping from factory.

Check your electric source, voltage, and cord correctly to terminal block.

Improper wiring and incorrect voltage can cause motor burnout.



Check voltage

### Danger of problem recurrence and failure

If protective device or thermal protector activates, be sure to turn off electric source and inspect causes to solve the problem.


Do not operate until problem is solved.

Operation while problem is left unsolved can cause problem recurrence and failure.



Inspect cause of problem

This shows three-phase 200V connection for DIS-501.

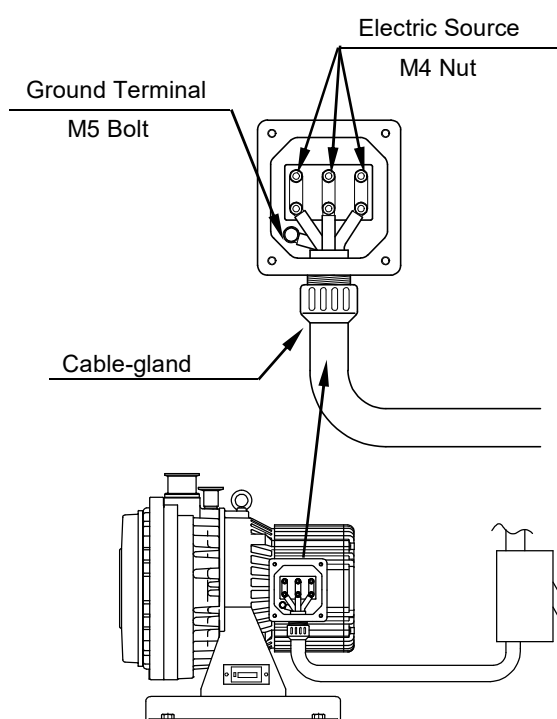

Activate the emergency stop by electric source switch or protective device.



Avoid motor burnout by protective device (chart 1).



Use rated over electric source cable and earth cord.

over rated 10A/1-phase, 7A/3-phase for DIS-251

over rated 18A/1-phase, 15A/3-phase for DIS-501



Use round type terminal.



Fit cable-gland.



Connect earth cord to earth terminal.


Chart-1

Single-phase specifications				Three-phase specifications			
Voltage V	Frequency Hz	Recommended protective device (or breaker) capacity A		Voltage V	Frequency Hz	Recommended protective device (or breaker) capacity A	
		DIS-251	DIS-501			DIS-251	DIS-501
100	50	6.0	10.7	200	50	1.8	3.1
100	60	6.0	12.5	200	60	2.2	3.2
115	60	5.4	10.8	208	60	2.2	3.0
200	50	3.0	5.4	230	60	2.2	2.9
200	60	3.2	6.0	380	50	1.1	1.8
230	50	2.7	4.9	400	50	1.1	1.8
230	60	2.7	5.0	415	50	1.2	1.9
				460	60	1.2	1.7



## How to wire


- ① Remove 4pcs. of M5 bolt at motor terminal box and remove protection cover.  
 ※Be sure to keep M5 bolts and washer, which were removed from the protection cover.
- ② Wiring diagram is shown inside protection cover.
- ③ Please tighten a terminal plate and a cable with the nut of the top and bottom from the terminal surface at about 5mm positions like a figure.

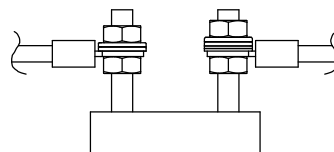

### Single-phase specifications

You can change to a 100V or 200V connection by changing terminal plate (2pcs.).


**※It is wired to 200V when shipping from factory.**

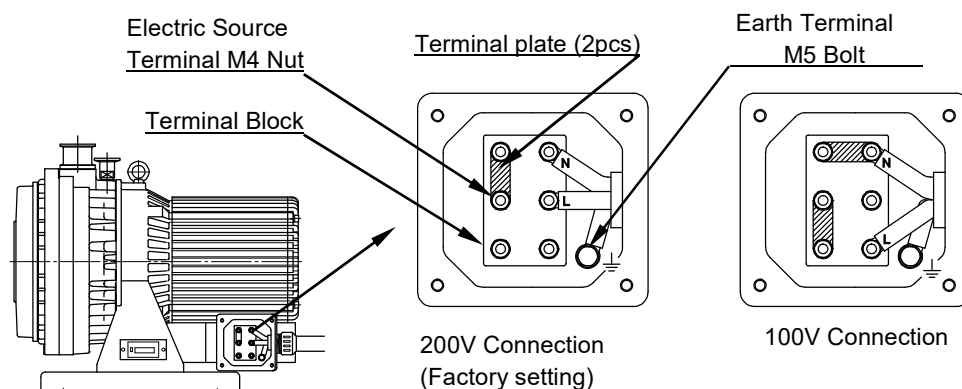

### Three-phase specifications

You can change to a 200V or 400V connection by changing terminal plate (3pcs.).

**※It is wired to 200V when shipping from factory.**

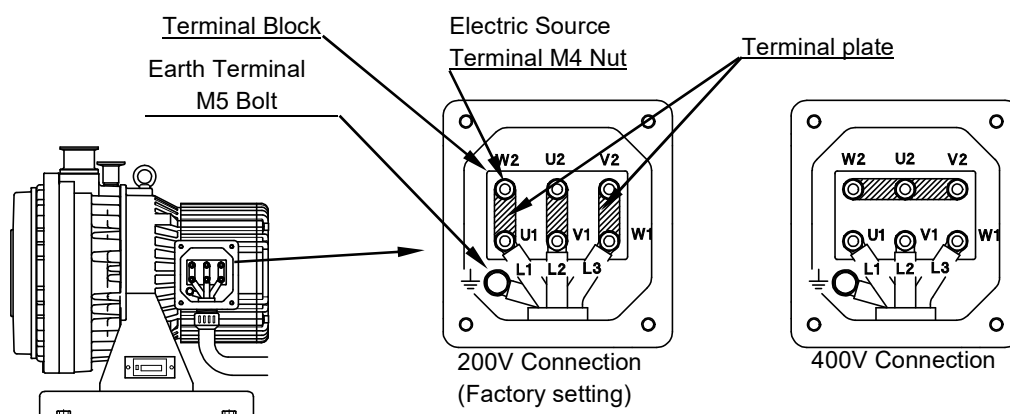

- ④ If you want to change to a 100V or 400V connection, remove M4 nut of electric source terminal and change terminal plate as illustrated below.
- ⑤ Connect electric source cable to terminal by using cable-gland at  $\phi 22\text{mm}$  hole of motor terminal box.
- ⑥ Insert electric source cable through cable-gland on the bottom side of terminal box.
- ⑦ Connect each phase to each electric source terminal respectively in accordance with the above wiring diagram.

Terminal screw nuts should be torqued between  $1.2 \text{ N} \cdot \text{m}$  and  $1.5 \text{ N} \cdot \text{m}$ .




Single-phase specifications : L-N to V1-W1 (200V connection)

: L-N to U1-W1 (100V connection)

Three-phase specifications : L1-L2-L3 to U1-V1-W1


- ⑧ The protective earth cord shall be suffice in length and put up to keep the cord the last to take the strain if the cable slips in its anchorage.

## 3.2 Test operation


<div style="text-align: center;">  <b>CAUTION</b> </div>	
<b>Danger of exhaust disruption</b> <b>Remove blank flange from inlet and outlet.</b> Operation with blank flange being fitted can disrupt air flow or cause blank flange to fly by exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects.	 <b>Remove blank flange</b>
<b>Danger of foreign matter entering inlet</b> <b>When checking turning direction, be careful not to enter foreign matter into an inlet.</b> Foreign matter entering inlet can cause failure.	 <b>Prevent foreign matter from entering</b>

### Test operation

- ① Open inlet and outlet  
Remove blank flanges (2 places) from inlet and outlet of vacuum pump.

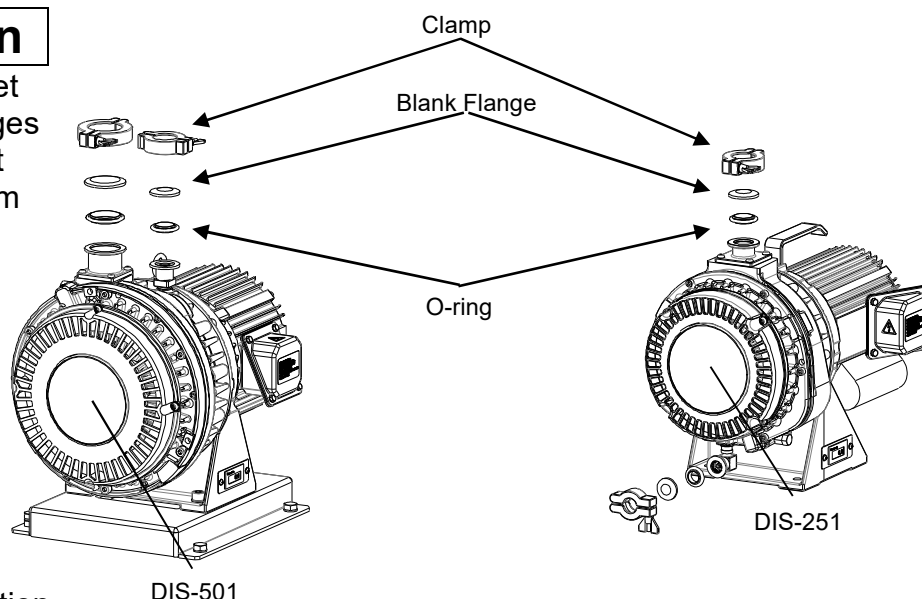

- ② Check turning direction  
Open inlet, turn on electrical source to start operating vacuum pump. Vacuum pump turns clockwise when viewed from motor side.

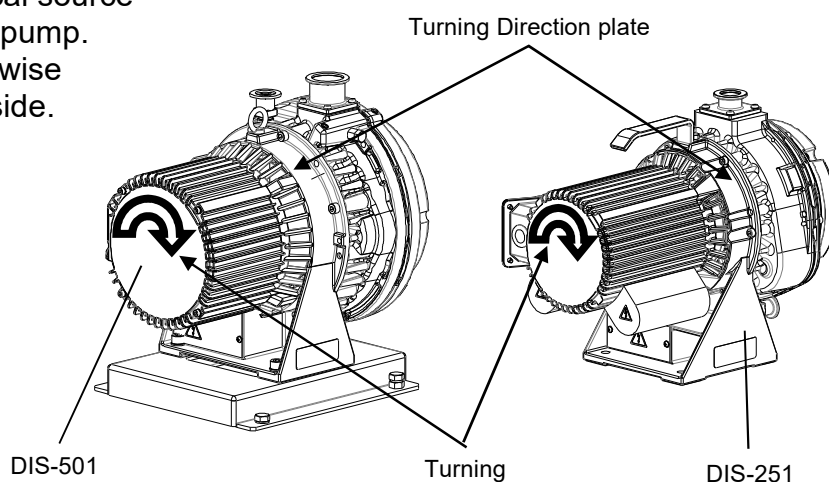

Check that comes out of air outlet.

If air does not come out from outlet, vacuum pump of three-phase motor may turn in reverse.

In that case, stop vacuum pump, turn off main electrical source and change 2 out of 3 cords of electric source connection and change turning direction to correct one.

If you fit pump to vacuum system and control operation of vacuum pump by remote control, **first check pump itself for turning direction** and then fit it to vacuum system.

## Important

**Vacuum pump turns clockwise when viewed from motor side.**

Check that air comes out from outlet.

If pump turns counter-clockwise, stop vacuum pump, turn off electrical source and change 2 out of 3 cords of electrical source connection.

### 3.3 Connection to vacuum system (chamber)

- Inlet of DIS-251 is NW25 and outlet is NW16.
- Inlet of DIS-501 is NW40 and outlet is NW25.



## CAUTION

#### Danger of exhaust disruption

**When connecting exhaust piping to vacuum pump and when combining piping with another vacuum pump, pay attention to piping size and length so that it does not cause exhaust resistance.**

Exhaust resistance can disrupt air flow, resulting in failure and over-current.



**Pay attention to exhaust resistance**

## Important

**Use isolation valve between vacuum system and inlet.**

Isolation valve is necessary to prevent the drawback of debris attached to the inside of vacuum pump into the vacuum chamber during start-up and shut-down. (We recommend the use of leak valve also). We recommend the use of an automatic valve as the isolation valve which closes during power failure in order to prevent the drawback of debris inside pump into the vacuum chamber during power failure.

**Use the clean connecting pipe between vacuum chamber and vacuum pump.**

We recommend the use of a flexible tube between inlet of vacuum pump and vacuum chamber so that vibration of pump does not transmit to vacuum chamber.

**When connecting exhaust piping to outlet of vacuum pump, refer to the following size and length.**

- It is recommended in the case of DIS-251, max. **5m** direct pipe length for exhaust pipe size **NW16 (inner dia.16)**
- It is recommended in the case of DIS-501, max. **15m** direct pipe length for exhaust pipe size **NW25 (inner dia.25)**


But if pipe length becomes longer, use a larger size exhaust pipe.

**Make sure that exhaust piping is not clogged during pump operation.**

Make sure that pressure at outlet does not exceed atmospheric pressure at any conditions.

**In order to keep condensation away from feeding into the exhaust port, take proper measure.**



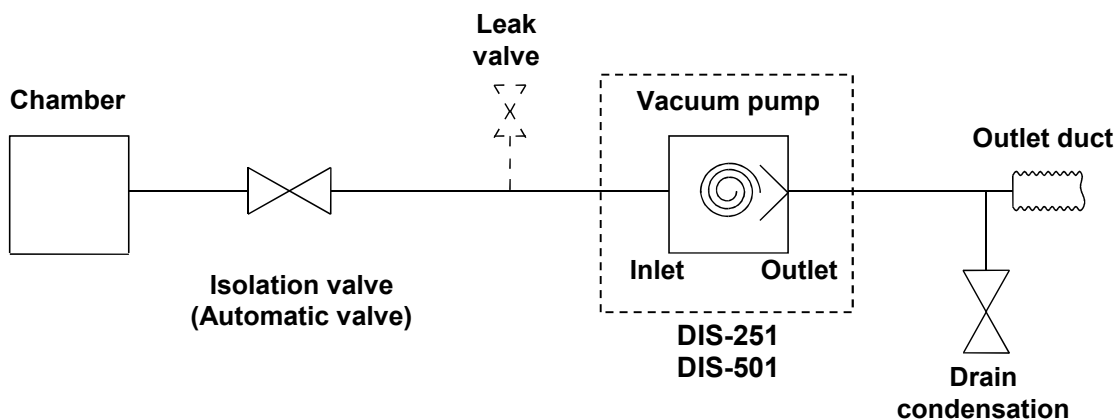


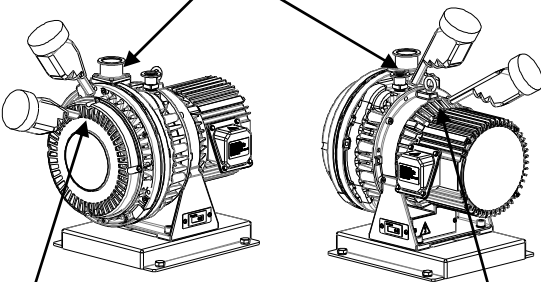



It causes exhaust disturbance. Drain condensations periodically by using valve separately arranged.



## 4. Operation

Be sure to use the procedure below to start up or shut down the pump.

- When you do not use air-flush device,  
**proceed 4.1 Air-flush closed operation [page 21].**
- When you use air-flush device,  
**proceed 4.2 Air-flush opened operation [page 22].**

<div style="text-align: center;">  <b>WARNING</b> </div>	
<p><b>Danger of explosion and ignition</b></p> <p><b>Do not evacuate gas which is hazardous to humans or explosive, flammable, or corrosive. Do not evacuate with substances containing chemicals, solvents, and powders.</b></p> <p>If done, it can cause failure or bodily injury by gas, explosion or ignition.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <div style="display: flex; align-items: center;">  <div style="margin-left: 5px;"> <b>Do not pump</b> </div> </div> <div style="margin-top: 10px;"> <ul style="list-style-type: none"> <li>· Toxic gas</li> <li>· Explosive gas</li> <li>· Flammable gas</li> <li>· Corrosive gas</li> <li>· Chemicals</li> <li>· Solvent</li> <li>· Powder</li> </ul> <div style="display: flex; justify-content: flex-end; margin-top: 5px;"> <ul style="list-style-type: none"> <li>· Water</li> <li>· Liquid</li> </ul> </div> </div> </div> <p>※When evacuating vapor, operate in accordance with 4.2 [page 22].</p>	 <b>Never evacuate hazardous gas</b>
<p><b>Danger of entanglement and foreign matter dispersal</b></p> <p><b>Never put finger or foreign matter into air hole of fan cover, air hole of motor or clearance between FS(1) and FS(2) cooling fins.</b></p> <p>If done, it can cause bodily injury from entanglement with turning section, or foreign matter dispersal.</p> <div style="display: flex; justify-content: space-around; align-items: flex-start; margin-top: 20px;"> <div style="text-align: center;">   <b>Finger, foreign matter</b> </div> <div style="text-align: center;">   <b>Finger, foreign matter</b> </div> </div> <div style="text-align: center; margin-top: 10px;"> <p>Clearance between FS(1) and FS(2) cooling fins</p>  <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <p>Air hole of fan cover</p> <p>Air hole of motor</p> </div> </div>	 <b>Avoid foreign matter</b>
<p><b>Danger of electric shock and entanglement</b></p> <p><b>Do not remove or alter safeguards or insulation parts.</b></p> <p>If done, it can cause bodily injury from electric shock or turning section and it can cause deteriorated performance and operating lifetime, and invalidate guarantee.</p>	 <b>Never alter</b>
<p><b>Danger of failure and bodily injury</b></p> <p><b>Change air-flush port only after vacuum pump is stopped.</b></p> <p>If you change it during vacuum pump operation, it can cause vacuum pump failure and bodily injury.</p>	 <b>Change after vacuum pump is stopped</b>



## CAUTION

<b>Danger of exhaust disruption</b> <b>Remove blank flange from inlet and outlet.</b> Operation with blank flange being fitted can disrupt exhaust or cause blank flange to fly by exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects.	 <b>Remove blank flange</b>
<b>Danger of vacuum break and pollution</b> <b>Be sure to close isolation valve between vacuum pump and vacuum system (chamber) during start-up and stop.</b> Start-up or stop with isolation valve in the open position can draw back gas and debris attached to inside of pump to vacuum chamber due to pressure differential, resulting in vacuum break and pollution on vacuum chamber side.	 <b>Start or stop after closing isolation valve</b>
<b>Danger of abnormal sound and failure</b> <b>Open inlet to atmosphere for about 5 seconds before restarting vacuum pump.</b> If not, it can unbalance temperature inside vacuum pump, resulting in failure.	 <b>Open air inlet</b>
<b>Danger of exceeding permissible temperature of intake gas</b> <b>If intake gas temperature is over 50°C, be sure to install a chiller or trap between vacuum pump and vacuum chamber so that gas intake temperature of vacuum pump keeps below 50°C.</b> If not, vacuum pump temperature can increase, resulting in failure.	 <b>Beware temperature of intake gas</b>
<b>Danger of remaining moisture</b> <b>When evacuating moisture, be sure to open air-flush port (air-flush opened operation).</b> If you evacuate vapor while air-flush port is closed, condensed water will remain inside vacuum pump and cause failure.	 <b>Operate while opening air-flush port</b>
<b>Danger of insufficient vapor exhaust</b> <b>After evacuating vapor, do air-flush opened operation for at least one hour.</b> If you close air-flush port or stop vacuum pump soon after evacuating vapor, condensed water will remain inside vacuum pump which will cause failure.	 <b>Caution after exhausting vapor</b>
<b>Danger of exceeding permissible intake gas volume</b> <b>When sending N<sub>2</sub> gas or dry air into air-flush port, pressure should be the same as atmospheric pressure and flow rate should be less than 10L/min.</b> If not, it can increase pressure inside vacuum pump, resulting in failure.	 <b>Beware of intake gas volume</b>
<b>Risk of motor malfunction</b> <b>Refrain from frequent start/stop operation.</b> It induces malfunction of motor such as burn out. Please consult your distributor or factory representative for details. Appropriate operating mode with adequate interval and frequency of start/stop is varies owing to operating condition.	 <b>Caution for frequent start/stop and short interval</b>

## Important

**If it takes time to reach ultimate pressure of pump during initial operation (also operation after pump has not been used for a long time),**

Close inlet, and continue operation for 6~8 hours while opening inlet for 3~5 seconds to atmosphere 2~3 times per hour. During pump stoppage, moisture might have entered inside of pump and deteriorated performance to reach ultimate pressure.

**If pump has evacuated liquid such as water or high humid air (over 60%RH),**

Moisture can deposit inside pump and cause pump failure. In that case, close isolation valve, and open inlet to atmosphere for 3~5 seconds several times and exhaust moisture inside pump to outside.

**If pump has continued operation around ultimate pressure or continuously evacuated high humid gas**

Moisture can be condensed and remains inside pump, causing insufficient ultimate pressure and failure.

In that case, do air-flush opened operation in accordance with 4.2 [page 22].

## 4.1 Air-flush closed operation

### 4.1.1 Start-up

- ① Check that blank flange of outlet is removed.
- ② Close isolation valve in order to prevent the drawback of debris attached to the inside of vacuum pump into vacuum chamber due to pressure differential, resulting in vacuum break and pollution.  
(Open leak valve if you use leak valve).
- ③ Turn on vacuum pump.  
Please install an external power switch or protective device (breaker) before letting vacuum pump operate.
- ④ Check start-up of vacuum pump and open isolation valve (close leak valve soon after start-up if you use leak valve) and evacuate vacuum chamber.

### Important

**When continuously operating pump at around ultimate pressure (for example, using as fore line pump of turbo molecular pump) ,**

It can cause foreign matter or moisture to deposit inside pump, resulting in failure.

In that case, do air-flush opened operation or close isolation valve and open inlet to atmosphere for 3~5 seconds, 3~5 times daily.

**Be careful not to damage air-flush port (especially air-muffler section).**

If not, it can cause failure.

**When doing air-flush opened operation,**

Noise level will increase (by 7~8dB).

**Install pump in an area which is not exposed to debris such as iron powder, stone powder, polish powder or wood dust.**

Debris can clog air-muffler, undercutting air-flush effect.

### 4.1.2 Shut-down

- ① Be sure to close isolation valve in order to prevent the drawback of debris attached to inside of vacuum pump into vacuum chamber during operation due to pressure differential (open leak valve if you use leak valve).
- ② Turn off vacuum pump.  
Please install an external power switch or protective device (breaker) before letting vacuum pump operate.
- ③ Check shut-down of vacuum pump.

### Important

**Be sure to close isolation valve between vacuum pump and vacuum chamber during pump shut-down.**

If vacuum pump stops during air-flush opened operation, atmospheric air is drawn back from air-flush port to inside of vacuum pump, and vacuum on chamber side cannot be maintained. Be sure to close isolation valve between vacuum pump and vacuum chamber to prevent the drawback of debris from vacuum pump into vacuum chamber before stopping vacuum pump.

When returning air-flush opened operation to air-flush closed operation, operate as per 4.2.3[page 23].

## 4.2 Air-flush opened operation

This pump is equipped with air-flush port. Before evacuating vapor, read precautions below completely and be sure to understand the contents.

### Purpose of air-flush

Evacuating moisture or humid gas by vacuum pump can cause condensed water to remain in pump. This remaining water can cause failure of ultimate pressure or pump. Air-flush opened operation is necessary to exhaust the remaining water inside. Air-flush opened operation does not only exhaust moisture but also restores ultimate pressure.

※Vapor disposal volume is max. 25g/day, when doing air-flush opened operation(ambient temperature 25°C, humidity 60%RH).

## Important

**Maintenance interval of this pump is based on clean gas applications The standard differs when evacuating vapor.**

You must shorten maintenance interval (5.2 [page 26]) when evacuating vapor since vapor temperature, disposal volume, disposal frequency and substances in vapor have an influence on pump operation. When evacuating vapor, pay attention to all WARNING, CAUTION and Important notes (4 [page 19~20]).

### 4.2.1 Preparation


Before starting air-flush opened operation, first stop vacuum pump and proceed in accordance with the following procedure. Never try to do air-flush opened operation during operation.


### Fit air-muffler

- ① Stop vacuum pump.
- ② Remove plug from air-flush port with a spanner (nominal dia. 13mm).
- ③ Lightly fit the attached air-muffler to air-flush port.

※Store the removed plug and do not misplace it.

DIS-251

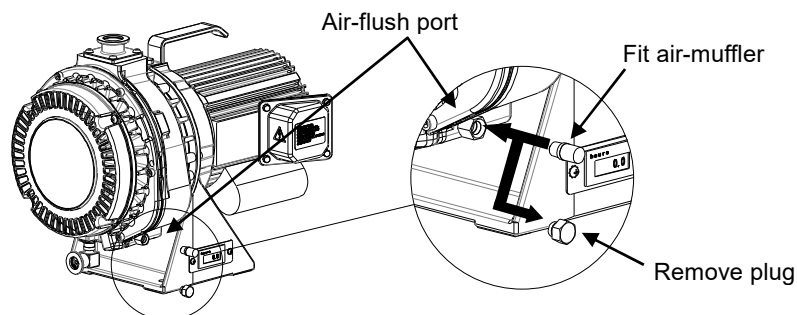

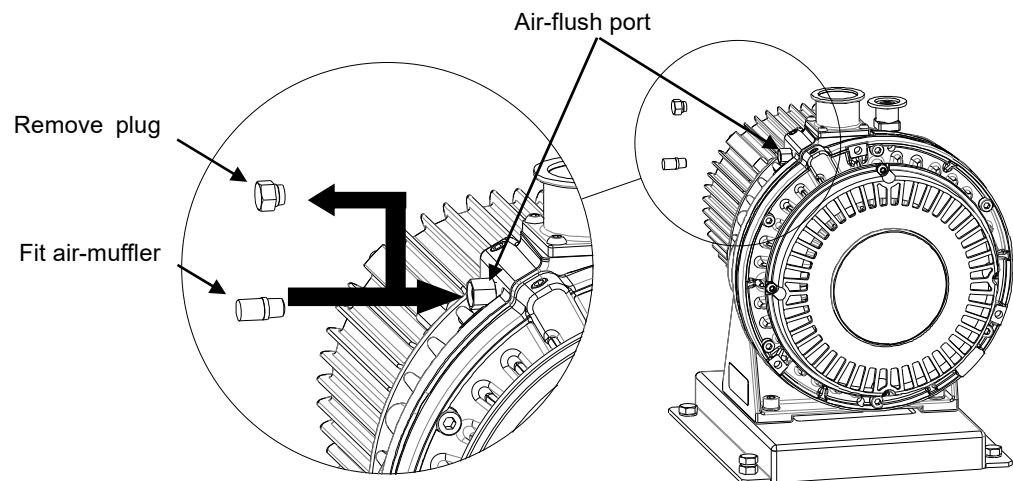

### 4.2.2 Start-up and shut-down

- ① Start vacuum pump according to 4.1.1 Operation [page 21].
- ② Stop vacuum pump according to 4.1.2 Shut-down [page 21].

### Important

#### Continuous evacuating of humid gas

When evacuating vacuum chamber while humidity in chamber is high, moisture volume drawn into pump differs according to temperature and pressure in chamber.

When pumping vacuum chamber containing humid gas, be sure to open air-flush port and operate pump (air-flush opened operation).

**Be careful not to damage air-flush port (especially air-muffler section) .**

Damage to air-flush port can cause failure.

**When doing air-flush opened operation**

Noise level will increase (by 7~8dB).

**Install pump in an area which is not exposed to debris such as iron powder, stone powder, polish powder or wood dust.**

Debris can clog air-muffler, undercutting air-flush effect.

**Be sure to close isolation valve between vacuum pump and vacuum chamber during pump shut-down.**

If vacuum pump stops during air-flush opened operation, atmospheric air is drawn back from air-flush port to inside of vacuum pump, and vacuum on chamber side cannot be maintained. Be sure to close isolation valve between vacuum pump and vacuum chamber to prevent the drawback of debris from vacuum pump into vacuum chamber before stopping vacuum pump.

When operating with air-flush OFF (closed), operate as per 4.2.3[page 23].

### 4.2.3 When returning to air-flush closed operation


Before starting air-flush opened operation, first stop vacuum pump and proceed in accordance with the following procedure. Never perform this procedure during operation.

#### Remove air-muffler


- ① Stop vacuum pump.
  - ② Remove air-muffler from air-flush port.
  - ③ Lightly fit plug to air-flush port with a spanner (nominal dia. 13mm).
- ※When restarting air-flush opened operation, refer to 4.2.1~4.2.2[page 22~23] and prepare and start.
- ※Store removed air-muffler and pay attention not to misplace it.





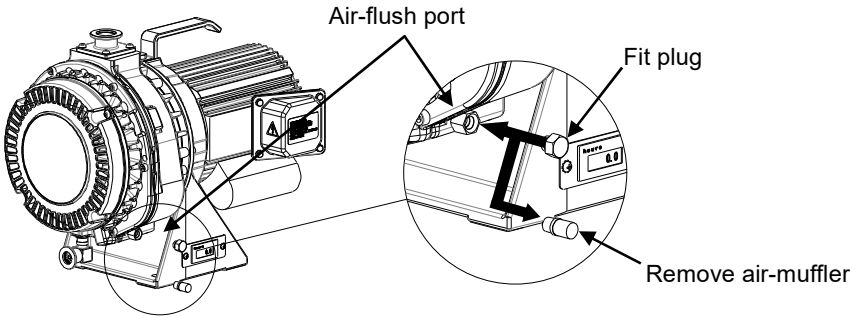

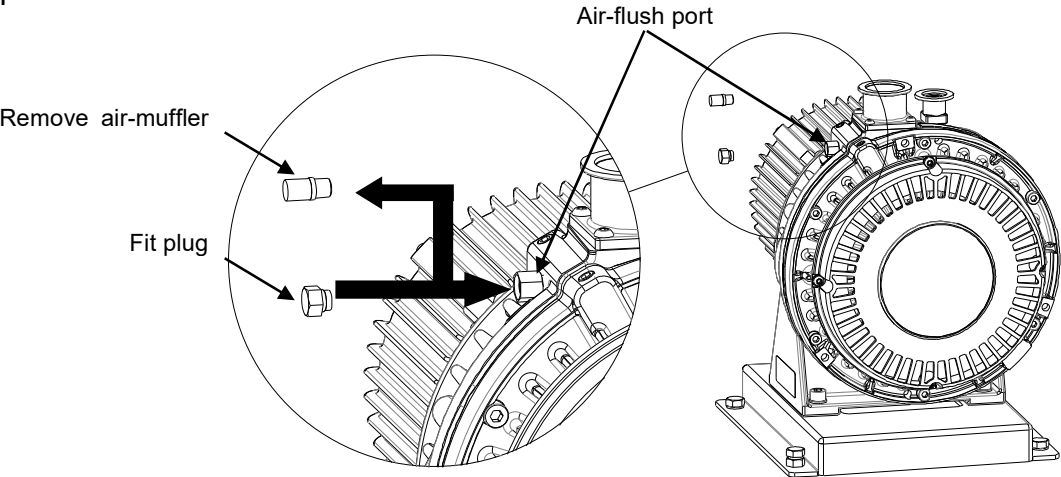

DIS-251



DIS-501



## 5. Maintenance and inspection

 <b>WARNING</b>	
<b>Danger of failure and bodily injury</b> <b>Conduct periodical maintenance and inspection.</b> If not, it can cause insufficient performance, failure of vacuum pump, and bodily injury.	 <b>Conduct periodical maintenance and inspection</b>
<b>Danger of burns</b> <b>Conduct maintenance and inspection only after vacuum pump becomes cool enough.</b> Maintenance and inspection soon after vacuum pump stops can cause burn injury.	 <b>Be careful about high temperature</b>
<b>Danger of restart</b> <b>Be sure to switch off electric source before maintenance or inspection.</b> <b>Single-phase motor has a thermal protector.</b> Vacuum pump restarts become cool without warning after vacuum pump.	 <b>With a thermal protector [Only single-phase motor]</b>
<b>Danger of electric shock</b> <b>Be sure to conduct maintenance and inspection after you turn off electric source.</b> If not, it can cause bodily injury from electric shock or turning object.	 <b>Turn off electric source</b>
<b>Danger of accident, failure and shorter operating lifetime</b> <b>Ask specialist to perform repairs.</b> Defective repairs can cause accident, failure or shorter operating lifetime.	 <b>Ask specialist to perform repairs</b>

### 5.1 Daily maintenance and inspection

Conduct the following daily maintenance and inspection.

Items	Contents	Measures
Vacuum pump itself	Abnormal sound	Ask specialist to repair.
	Abnormal vibration	Ask specialist to repair.
	Abnormal temperature	Ask specialist to repair.
	Cooling fins are dirty or clogged	Blow air, cleaning
Cooling fan Fan cover	Abnormal rotation	Ask specialist to repair.
	Dirty, clogged, damaged	Blowing air, clean, Ask specialist to repair.
Air-muffler	Dirty, clogged	Replace
Exhaust valve	Dirty, clogged	Blowing air, clean
Electric source cable	Deteriorated	Replace

## 5.2 Maintenance

When maintenance interval has elapsed, be sure to contact our distributor who sold it to you. This vacuum pump requires maintenance conducted only by our authorized specialist. Never try to disassemble, reassemble or alter on user's side. We are not responsible for any accidents caused by disassembly, reassembly or alteration which was done by the user or non-specialist.

The following parts are consumable and need to be replaced periodically.

Whenever something goes wrong with them, replace them immediately.

Where to inspect	Maintenance interval		Every 400 times vapor pumping
	Yearly or every 8,000 hours	Biennially or every 16,000 hours	
Bearing kit	grease / $\Delta$	$\bigcirc$	$\Delta$
Tip seal set	$\Delta$	$\bigcirc$	$\Delta$
Seal set	$\bigcirc$	$\bigcirc$	$\Delta$
O-ring set	$\bigcirc$	$\bigcirc$	$\Delta$
Exhaust valve set	$\bigcirc$	$\bigcirc$	$\Delta$
Air-flush kit	$\bigcirc$	$\bigcirc$	$\bigcirc$
Pin crank kit	$\Delta$	$\Delta$	$\Delta$
Vacuum pump itself	Inside cleaning / $\Delta$	Inside cleaning / $\Delta$	Inside cleaning / $\Delta$

$\bigcirc$  . . . Replace

$\Delta$  . . . Replace if something goes wrong.

Note 1 : Maintenance interval should be shorter than either the period or operating hours.

Note 2 : When you want further maintenance and inspection after either the 6<sup>th</sup> year or 48,000 operating hours, please contact our distributor who sold it to you.

### Important

#### Causes of failure

Shorten maintenance interval if conditions of installation or operation are unfavorable.

In particular, ambient temperature has a great influence on failure. Maintenance interval is based on an ambient temperature 5~40°C and a yearly average ambient temperature 25°C.

Shorten the maintenance interval if temperature exceeds the foregoing. If not, it can cause failure.

**Maintenance interval is not a guarantee period.**

#### Exceeding maintenance interval

Operation exceeding maintenance interval increases risk of failure and accidents.

When maintenance interval has elapsed, be sure to contact either our sales branches who sold it to you or local sales.

## 6. Problems and remedies

If something goes wrong, refer to the following chart and remedy problems.

If you cannot solve your problems, please contact either our sales branches who sold it to you or local sales.

Problems	Causes	Remedies
<b>Motor does not rotate.</b>	Protective device (or breaker) activates.	※Inspect and repair.
	Electric source cable is loose or cut.	Check connection. Repair or replace.
	Voltage drops.	Check size and length of cable.
	Motor malfunctions.	※ Inspect and repair.
	Pump malfunctions. Foreign matter enters.	※Inspect and repair.
	Motor protection gear activates.	Air outlet is clogged. Reset thermal protector. ※Inspect and repair.
<b>Motor stops soon.</b>	Protective device (or breaker) activates.	※Inspect and repair.
	Voltage drops.	Check size and length of cable.
	Motor malfunctions.	※Inspect and repair.
	Pump malfunctions. Foreign matter enters.	※Inspect and repair.
	Improper exhaust piping.	Check exhaust piping diameter and length. Air outlet is clogged. Remove blank flange from exhaust outlet.
	Motor protection gear activates.	Air outlet is clogged. Reset thermal protector. ※Inspect and repair.
<b>Ultimate pressure is insufficient.</b>	Air leaks from piping. O-ring is damaged.	Check tightness of piping. Replace.
	Moisture and solvent are drawn.	Open inlet to atmosphere and operate for a few minutes and then close inlet and operate for about 24 hours. Do air-flush opened operation. Install trap and filter.
	Number of motor revolutions drops.	Check wiring and voltage. ※Inspect and repair.
	Pump malfunctions.	※Inspect and repair.
<b>Abnormal sound, abnormal vibration</b>	Connection becomes loose.	Tighten connection. ※Inspect and repair.
	The installation is not level.	Correct vacuum pump inclination within 5°. ※Inspect and repair.
	Foreign matter enters pump.	※Inspect and repair.
	Motor malfunctions.	※Inspect and repair.
	Pump malfunctions.	※Inspect and repair.

※ Contact our distributor who sold it to you.

## 7. Disposal

When a vacuum pump is disposed, please comply with local law and/or regulations such as the Waste Disposal Law.

## 8. Specifications

### 8.1 Specifications

#### 8.1.1 DIS-251

Model			DIS-251											
Displacement L/min		50Hz	250											
		60Hz	300											
Ultimate pressure Pa			≤1.6											
Leak tightness Pa · m <sup>3</sup> /s			≤1.0x10 <sup>-7</sup>											
Max. inlet pressure			Atmospheric pressure											
Ambient operating temperature °C			5~40											
Motor	Type		Single-phase induction motor Totally-enclosed, 4-pole, Insulation Class B, IP44 Capacitor start, run, Thermal Protector TP212, Automatic reset type				Three-phase induction motor, Totally-Enclosed, 4-pole, Insulation Class B IP44							
	Output kW		0.4											
	Voltage V		100	115	200	230	200	208	230	380	400	415	460	
	Rated current A	50Hz	4.8	—	2.6	2.4	1.6	—	—	0.9	0.9	1.0	—	
		60Hz	4.8	4.3	2.8	2.4	1.9	1.9	1.8	—	—	—	1.0	
	Revolution min <sup>-1</sup> {rpm}	50Hz	1440	—	1430	1450	1420	—	—	1440	1440	1440	—	
		60Hz	1710	1740	1700	1730	1660	1660	1690	—	—	—	1720	
Noise level 1m dB(A) (With air-flush ON)			≤58 (≤66)											
Inlet connection			NW25											
Outlet connection			NW16											
Direction of inlet			Vertical											
Dimensions mm L×W×H			392×246×334					362×246×334						
Mass kg			25					23						
Cooling system			Air-cooled											
Others			With hour counter and air-flush											

Note 1 : Pumping speed and ultimate pressure should remain the same whether air-flush system is used or not.

Note 2 : Maximum voltage allowance is + or - 10% from motor rating.

Note 3 : Noise level is measured at ultimate pressure in an anechoic room.

Note 4 : Leak tightness is measured while the product is stopped and air flush is shut off (closed).

Note 5 : Vapor handling volume is no more than 25g/day (at 25°C 60%RH) with air-flush opened operation.

Air-flush flow rate is 10L/min.

Note 6 : This product is wired for 200V at the factory.

Note 7 : This Three-phase motor is not equipped with motor protection.

Install branch circuit protection device for safety. Consult to qualified electrician for details.

Note 8 : This product is designed for indoor use. Install the product away from moistures or excessive humidity.

Note 9 : All data shown in this literature were measured based on our test standard and specific conditions.

Actual measurements are subject to change of conditions of use.

Note10 : The specification might change without a previous notice for the quality improvement.

## 8.1.2 DIS-501

Model		DIS-501												
Displacement L/min	50Hz	500												
	60Hz	600												
Ultimate pressure Pa		≤1												
Leak tightness Pa · m <sup>3</sup> /s		≤1.0x10 <sup>-7</sup>												
Max. inlet pressure		Atmospheric pressure												
Ambient operating temperature °C		5~40												
Motor	Type	Single-phase induction motor Totally-enclosed, 4-pole, Insulation Class B, IP44 Capacitor start, run, Thermal Protector TP212, Automatic reset type				Three-phase induction motor, Totally-Enclosed, 4-pole, Insulation Class B, IP44								
	Output kW		0.6											
	Voltage V		100	115	200	230	200	208	230	380	400	415	460	
	Rated current A	50Hz	8.5	—	4.3	3.9	2.7	—	—	1.57	1.57	1.63	—	
		60Hz	10.0	8.6	4.8	4.0	2.8	2.6	2.5	—	—	—	1.47	
	Revolution min <sup>-1</sup> {rpm}	50Hz	1430	—	1430	1450	1460	—	—	1470	1470	1470	—	
		60Hz	1660	1720	1690	1730	1740	1740	1760	—	—	—	1770	
Noise level 1m dB(A) (With air-flush ON)		≤62 (≤70)				≤60 (≤68)								
Inlet connection		NW40												
Outlet connection		NW25												
Direction of inlet		Horizontal [Vertical]												
Dimensions mm L×W×H		444×328×370 [444×290×396]				374×328×370 [374×292×396]								
Mass kg		44				38								
Cooling system		Air-cooled												
Others		With hour counter and air-flush												

Note 1 : Pumping speed and ultimate pressure should remain the same whether air-flush system is used or not.

Note 2 : Maximum voltage allowance is + or - 10% from motor rating.

Note 3 : Noise level is measured at ultimate pressure in an anechoic room.

Note 4 : Leak tightness is measured while the product is stopped and air flush is shut off (closed).

Note 5 : Vapor handling volume is no more than 25g/day (at 25°C 60%RH) with air-flush opened operation.

Air-flush flow rate is 10L/min.

Note 6 : This product is wired for 200V at the factory.

Note 7 : This Three-phase motor is not equipped with motor protection.

Install branch circuit protection device for safety. Consult to qualified electrician for details.

Note 8 : This product is designed for indoor use. Install the product away from moistures or excessive humidity.


Note 9 : All data shown in this literature were measured based on our test standard and specific conditions.

Actual measurements are subject to change of conditions of use.


Note10 : The specification might change without a previous notice for the quality improvement.

# 8.2 Dimensions

## 8.2.1 DIS-251

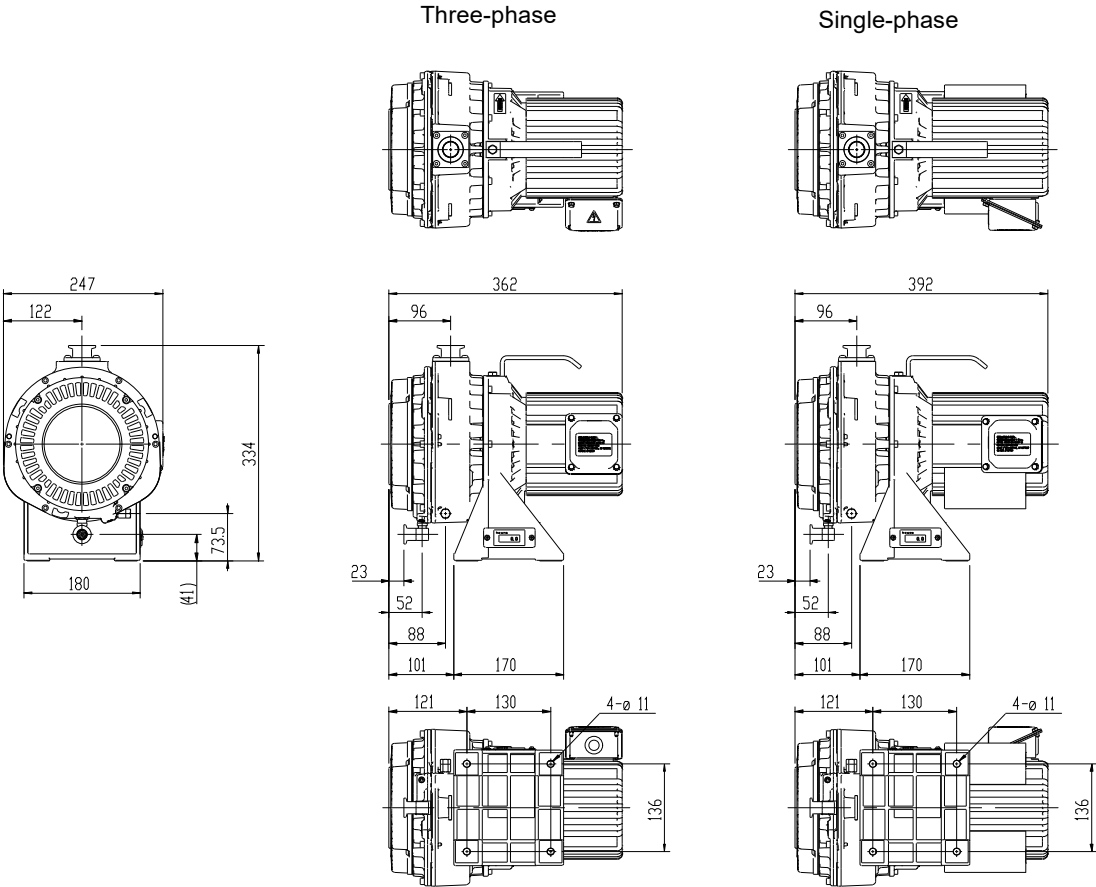


## 8.2.2 DIS-501

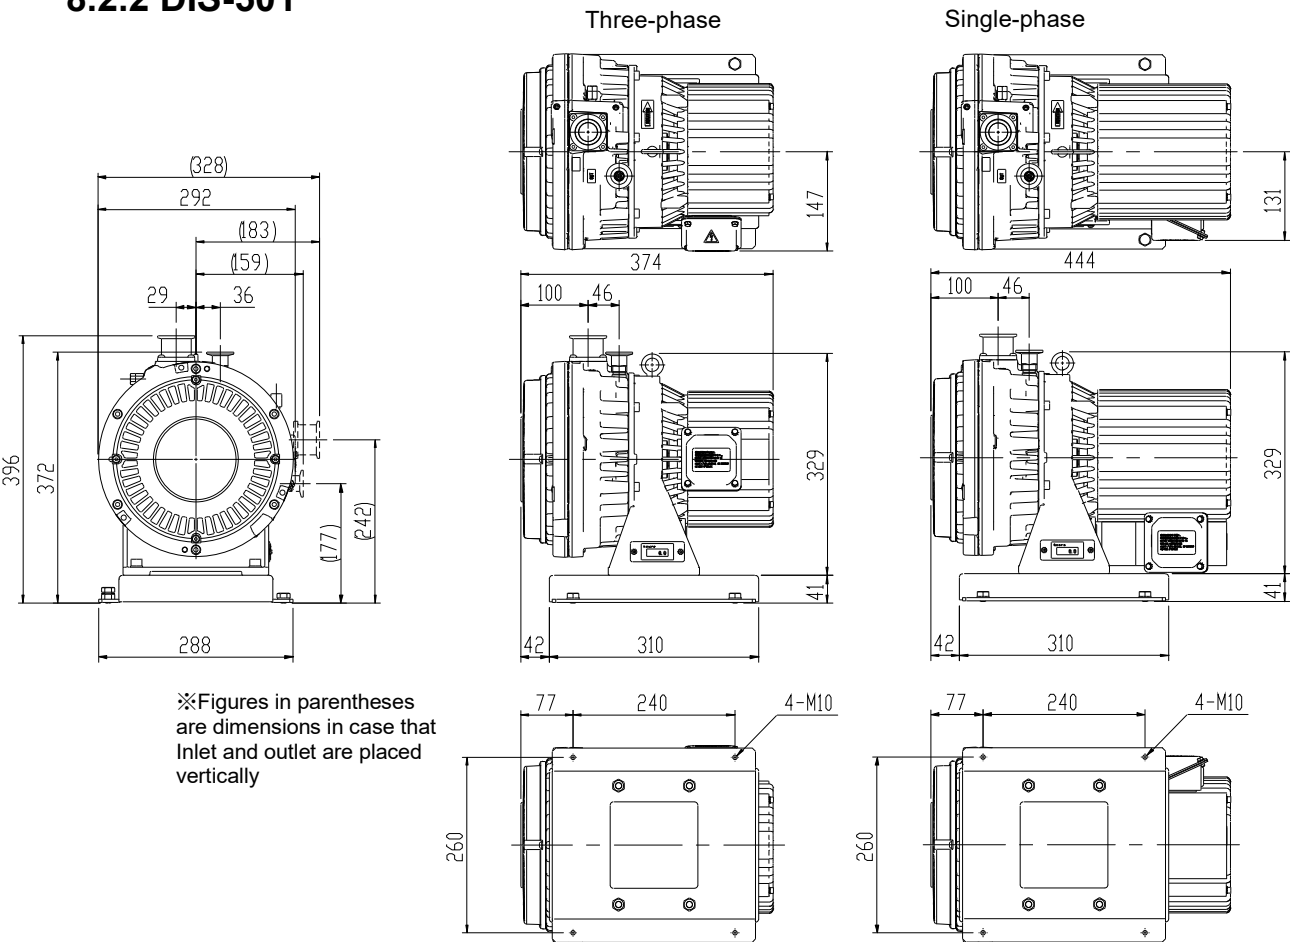

※Figures in parentheses are dimensions in case that Inlet and outlet are placed vertically

8.3 Performance data

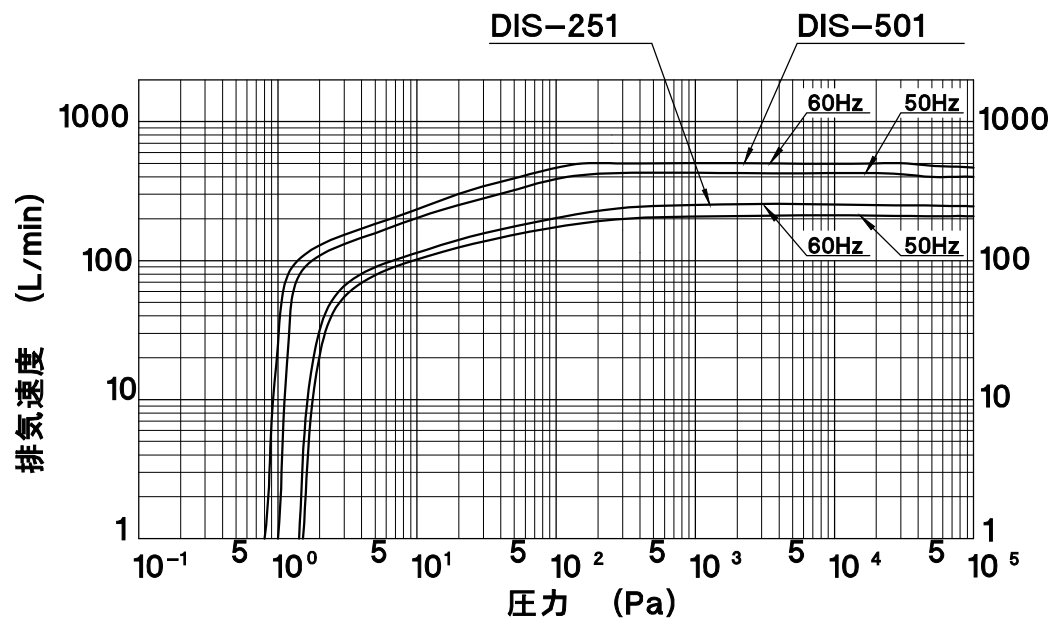



## 9. Warranty and After-sales service

### 9.1 Warranty

The warranty period of the scroll dry vacuum pump shall be one year from the date of delivery to a place designated by the customer or 8,000-hour operation whichever comes faster. ULVAC KIKO warrants that any part of the product excluding the consumables that proves to be defective within the warranty period even though the scroll dry vacuum pump is properly operated according to this instruction manual will be repaired or replaced, free of charge. However, this warranty shall not cover any of the following malfunctions.

- ① Problem caused by not following to “For safe operation” in the operation manual.
- ② Malfunction or damage caused by operation or repairing other than the descriptions in the operation manual.
- ③ Malfunction or damage caused by any other product than the scroll dry vacuum pump.
- ④ Malfunction or damage caused by disassembling, remodeling or repairing the scroll dry vacuum pump by an unauthorized person.
- ⑤ Malfunction or damage caused by disasters.
- ⑥ Replacement of consumables.

This warranty shall be limited to the scroll dry vacuum pump. Therefore, any damage to the other products caused by a malfunction of this vacuum pump shall not be covered by the warranty. This warranty is valid only in Japan.

### 9.2 After-sales and service

Periodical inspection is recommended to use the scroll dry vacuum pump safely and efficiently. After the warranty period (one year or 8,000-hour operation), any inspection or the scroll dry vacuum pump requires a charge. In addition, malfunctions specified in the above preconditions require a charge for repair or trouble shooting even if the warranty period is not expired. When requesting repair, make a copy of the operating conditions **check sheet** on the next page and complete it. Then attach the complete sheet to the vacuum pump and send it to the service representative. However, please note that ULVAC KIKO cannot repair or inspect the vacuum pump if any gas prohibited in this manual or any gas that gives an adverse effect to the service person was sucked in the vacuum pump. The scroll dry vacuum pump is accurately and strictly manufactured. Contact the sales or service representative if the vacuum pump does not operate normally. Never attempt to repair it by yourself.

For any trouble of the system in which the scroll dry vacuum pump is installed, contact the manufacturer of the system for repair.

## Vacuum Pump Check Sheet For Repair

(for disassembly, inspection and repair)

- ※ Please inform the following items completely for safety precautions against our maintenance staff. Fill in the item below and attached to the repair pump.

Date of issue : \_\_\_\_\_ Year \_\_\_\_\_ Month \_\_\_\_\_ Date \_\_\_\_\_

Customer's name : \_\_\_\_\_

Person in charge : \_\_\_\_\_

TEL : \_\_\_\_\_ FAX : \_\_\_\_\_

Representative Distributor : \_\_\_\_\_

Person in charge : \_\_\_\_\_

TEL : \_\_\_\_\_ FAX : \_\_\_\_\_

Product Name : \_\_\_\_\_ Serial No. (MFG. No) : \_\_\_\_\_

Purchased Date : \_\_\_\_\_ Year \_\_\_\_\_ Month \_\_\_\_\_

### 1. Request item

- ☐ Repair order during the warranty period (No Charge)  
☐ Evaluation pump disassembly inspection required or inspection for pump required (No charge)  
☐ Immediate repairing is required、 (Charge)  
☐ Periodical inspection or over haul (Charge)  
☐ Repair order is required and estimation is required before start repairing、

### 2. Trouble situation

☐ Unusual sound ☐ Pressure degradation ☐ Irregular action ☐ Others \_\_\_\_\_

### 3. Purpose of the usage (Device's name if necessary)

\_\_\_\_\_

### 4. Evacuated gas (Type of the gas)

(1) Hazardous situations for injury ☐ Yes ☐ No

(2) Type of the gas・Name of the gas \_\_\_\_\_

### 5. Operational situation

(1) Operational elapsed time : \_\_\_\_\_ hr ☐ 24hrs consecutive operation  
☐ On Off operation

(2) Installation place : \_\_\_\_\_

(3) Ambient temperature : \_\_\_\_\_

(4) Operational pressure : \_\_\_\_\_

### 6. Miserenious information. Please describe any information if necessary.

\_\_\_\_\_

### 7. Send to

☐ Ulvac Kiko, Inc. CS Center. Yokohama Service Dep.

【Address】 1-10-4, Kitashinoyokohama, Kohoku-ku, Yokohama City, Kanagawa Prf, Japan

TEL:045-533-0509 FAX:045-533-0512

☐ Ulvac Kiko, Inc. CS Center. Miyazaki Service Dep.

【Address】 291-7, Chausubaru, Saito City, Miyazaki Prf. Japan

TEL:0983-42-4135 FAX:0983-43-2159

- ※ Use this paper by recopying for every information. When sending your information without this check sheet, repairing may not be acceptable.