

ULVAC



CA72161370

Instruction Manual (Original Instructions)

■ Oil-free Scroll Vacuum Pump

DIS-90

This instruction manual includes very important warnings, cautions and operating procedure in order to operate this pump safely and efficiently.
Be sure to read this instruction manual thoroughly and fully understand before operation.
After reading it, store it in a convenient place for immediate and future reading.

※Before use, be sure to fill in the blank spaces below for future repair and after-service.

| |
|--------------------------|
| Serial No. |
| Who sold it to you |
| Purchase date |
| When you began operation |

Important information

Be sure to read this instruction manual to understand how to operate equipment correctly. Only operators, who fully understand warnings, cautions and instructions, are to operate the equipment. Improper operation (mishandling) can cause serious bodily injury, death, fire or explosion.





Store this manual in a convenient place for immediate and future reference.




◆ Regarding safety

- The safety instructions given in this manual are the minimum operating requirements. Follow all national or municipal laws and regulations pertaining to fire, electricity, and other safety regulations, as well as corporate regulations.
- Pay special attention to items which are shown by the below marks and symbols.
- Symbols and marks have the following meanings.

Examples of marks

| | | |
|--|----------------|---|
|  | WARNING | Indicates a potentially hazardous situation which, if not avoided, may result in serious injury or loss of life. |
|  | CAUTION | Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or property damage. |

Examples of symbols

| | |
|---|---|
|  | Indicates [Beware]. We will explain briefly in or near the symbol. (The example on the left is [Beware of electric shock]). |
|  | Indicates [Prohibited action]. We will explain briefly in or near the symbol. (The example on the left is [Do not touch]). |
|  | Indicates [Required action]. We will explain briefly in or near the symbol. (The example on the left is [Be sure to ground]). |

* We shall not be responsible for any injury or damage caused by disregard of warnings, cautions or instructions.

Supplementary notes











| | |
|------------------|---|
| Important | Indicates notes which we ask you to observe. They are helpful to achieve full performance and functionality of the equipment. |
|------------------|---|

For safe operation

Below is very important information about how to safely operate the equipment.
Before operation, be sure to read and fully understand the contents.














WARNING

| | | | |
|---|--|---|--|
|  Be careful about lifting | Danger of cargo collapse Be careful to install vacuum pump using motor handle (DIS-90 mass 14kgs) while paying attention to stability of suspended load. If not, it can cause damage, failure or bodily injury from falling cargo due to hoisting failure, or by being caught between suspended cargo and other material. |  Avoid moisture | Danger of electric shock Install in an area which is not exposed to moisture such as rain or steam. If moisture comes into and tact with the electric source connection, it can cause fire or bodily injury due to short-circuit or electric shock. |
|  Install at a safe site | Danger of explosion, fire and accident Install in an area free from explosive, flammable or corrosive substances. If not, it can cause explosion, fire or accident. |  Ask qualified electrician | Danger of short-circuit and electric shock Ask a qualified electrician to perform electric wiring. If not, short-circuit or electric shock can cause fire or bodily injury. |
|  Turn off electric source | Danger of electric shock and entanglement Be sure to turn off electric source on building site before wiring. If not, it can cause electric shock or bodily injury due to turning objects. |  Install overcurrent protective device | Danger of accident, fire and failure Be sure to install protective device to protect circuitry. We recommend overcurrent protective device (rated 15A) to protect branch circuit. If equipment is not stopped in an emergency, it can cause accident, fire or failure. |
|  Install emergency stop switch | Danger of accident, fire or failure Be sure to install an electric source emergency stop switch (or protective device that can urgently stop). If equipment is not stopped in an emergency, it can cause accident, fire or failure. |  Install short circuit protective device | Danger of fire and electric shock Install short circuit protective device. If not, it can cause bodily injury due to fire or electric shock. |
|  Install motor protective circuit breaker to protect motor | Danger of electric fire and electric shock Install motor protective circuit breaker to protect motor. If not, bodily injury due to electric fire or electric shock can result. If you have any questions about the selection of protective devices, contact either our sales branches who sold it to you or local sales offices. |  Be careful about wiring | Danger of short-circuit and electric shock We recommend an electric source cable of more than <u>2mm² (more than rated 10A) cross section area for electric source cable and earth cord.</u> Be careful to avoid voltage drop considering local situation. If not, it can cause a short-circuit fire and may result in bodily injury from electric shock. |
|  Use crimp-style terminal | Danger of short-circuit and electric shock Fit firmly proper round type crimp-style terminal to electric source cable using crimp tool and connect to motor terminal section. If not, it can cause short-circuit fire or bodily injury from electric shock due to looseness or disconnection. |  Protect cable from being pulled | Danger of short-circuit and electric shock Be sure to fit cable-gland to hole of φ22mm at motor terminal box. If not, it can cause short-circuit fire or bodily injury from electric shock. |

For safe operation



WARNING

| | | | |
|---|---|--|--|
|  <p>Protect cable from being pulled</p> | <p>Danger of short-circuit and electric shock</p> <p>The power-supply conductor shall be free from strain including twisting by using cord anchorage, which is specified by the local electrical wiring regulation. If not, it can cause short-circuit fire or bodily injury from electric shock.</p> |  <p>Be sure to ground</p> | <p>Danger of electric shock</p> <p>Connect earth cord to earth terminal in motor terminal box. If not, it can cause bodily injury from electric shock.</p> |
|  <p>With a thermal protector</p> | <p>Danger of restart</p> <p>Be sure to switch off electric source before maintenance or inspection. Single-phase motor has a thermal protector. Vacuum pump restarts become cool without warning after vacuum pump.</p> |  <p>Never evacuate hazardous gas</p> | <p>Danger of explosion and ignition</p> <p>Do not evacuate gas which is hazardous to humans or explosive, flammable, or corrosive. Do not evacuate with substances containing chemicals, solvents, and powders. If done, it can cause failure or bodily injury by gas, explosion or ignition.</p> |
|  <p>Avoid foreign matter</p> | <p>Danger of entanglement and foreign matter dispersal</p> <p>Never put finger or foreign matter into air hole of fan cover, air hole of motor or clearance between FS(1) and FS(2) cooling fins. If done, it can cause bodily injury from entanglement with turning section, or foreign matter dispersal.</p> |  <p>Never alter</p> | <p>Danger of electric shock and entanglement</p> <p>Do not remove or alter safeguards or insulation parts. If done, it can cause bodily injury from electric shock or turning section and it can cause deteriorated performance and operating lifetime, and invalidate guarantee.</p> |
|  <p>Change after vacuum pump is stopped</p> | <p>Danger of failure and bodily injury</p> <p>Change air-flush port only after vacuum pump is stopped. If you change it during vacuum pump operation, it can cause vacuum pump failure and bodily injury.</p> |  <p>Conduct periodical maintenance and inspection</p> | <p>Danger of failure and bodily injury</p> <p>Conduct periodical maintenance and inspection. If not, it can cause insufficient performance, failure of vacuum pump, and bodily injury.</p> |
|  <p>Be careful about high temperature</p> | <p>Danger of burns</p> <p>Conduct maintenance and inspection only after vacuum pump becomes cool enough. Maintenance and inspection soon after vacuum pump stops can cause burn injury.</p> |  <p>Turn off electric source</p> | <p>Danger of electric shock</p> <p>Be sure to conduct maintenance and inspection after you turn off electric source. If not, it can cause bodily injury from electric shock or turning object.</p> |
|  <p>Ask specialist to perform repairs</p> | <p>Danger of accident, failure and shorter operating lifetime</p> <p>Ask specialist to perform repairs. Defective repairs can cause accident, failure or shorter operating lifetime.</p> | <p>-</p> | |

For safe operation



CAUTION



**Use at
designated
temperature**

Danger of overheating

Operate at ambient temperature of 5°C ~40°C.
Operating at a temperature range other than that designated can cause accident, failure or bodily injury such as burns due to overheating.



**Pay attention
to ventilation**

Danger of overheating

Install in a well-ventilated area (refer to below chart).
Poor ventilation can disrupt cooling and cause accident, failure or bodily injury such as burns since this vacuum pump is an air-cooled type.



Avoid dust

Danger of dust

Be sure site is free from dust.
Sucking in of dust can cause failure.



**Install on a
solid, level
floor**

Danger of unbalance

Be sure to install on solid and level floor (less than 5° inclination).
Uneven installation can cause failure and movement of vacuum pump. If installation floor is unstable, fix pump base with 4-φ7 holes of pump leg (DIS-90).



**Avoid direct
sunlight**

Danger of overheating

Install where equipment is not exposed to direct sunlight.
Vacuum pump exposed to direct sunlight can overheat, resulting in failure.



Check voltage

Motor burnout

Before doing any wiring, check electric source and voltage. This pump is a multi voltage type of AC100V/AC200V. Voltage can be changed at terminal block. This pump is wired to 200V when shipping from factory. Check your electric source, voltage, and cord correctly to terminal block.
Improper wiring and incorrect voltage can cause motor burnout.



**Inspect cause of
problem**

Danger of problem recurrence and failure

If protective device or thermal protector activates, be sure to turn off electric source and inspect causes to solve the problem.
Do not operate until problem is solved.
Operation while problem is left unsolved can cause problem recurrence and failure.



**Remove blank
flange**

Danger of exhaust disruption

Remove blank flange from inlet and outlet.
Operation with blank flange being fitted can disrupt air flow or cause blank flange to fly by exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects.



**Prevent foreign
matter from
entering**

Danger of foreign matter entering inlet

When checking turning direction, be careful not to enter foreign matter into an inlet.
Foreign matter entering inlet can cause failure.



**Pay attention to
exhaust
resistance**

Danger of exhaust disruption

When connecting exhaust piping to vacuum pump and when combining piping with another vacuum pump, pay attention to piping size and length so that it does not cause exhaust resistance.
Exhaust resistance can disrupt air flow, resulting in failure and over-current.



**Start or stop
after closing
isolation valve**

Danger of vacuum break and pollution

Be sure to close isolation valve between vacuum pump and vacuum system (chamber) during start-up and stop.
Start-up or stop with isolation valve in the open position can draw back gas and debris attached to inside of pump to vacuum chamber due to pressure differential, resulting in vacuum break and pollution on vacuum chamber side.



**Open air
inlet**

Danger of abnormal sound and failure

Open inlet to atmosphere for about 5 seconds before restarting vacuum pump.
If not, it can unbalance temperature inside vacuum pump, resulting in failure.




CAUTION

| | | | |
|--|---|--|---|
|  <p>Beware temperature of intake gas</p> | <p>Danger of exceeding permissible temperature of intake gas</p> <p>If intake gas temperature is over 50°C, be sure to install a chiller or trap between vacuum pump and vacuum chamber so that gas intake temperature of vacuum pump keeps below 50°C. If not, vacuum pump temperature can increase, resulting in failure.</p> |  <p>Operate while opening air-flush port</p> | <p>Danger of remaining moisture</p> <p>When evacuating moisture, be sure to open air-flush port (air-flush opened operation). If you evacuate vapor while air-flush port is closed, condensed water will remain inside vacuum pump and cause failure.</p> |
|  <p>Caution after exhausting vapor</p> | <p>Danger of insufficient vapor exhaust</p> <p>After evacuating vapor, do air-flush opened operation for at least one hour. If you close air-flush port or stop vacuum pump soon after evacuating vapor, condensed water will remain inside vacuum pump which will cause failure.</p> |  <p>Beware of intake gas volume</p> | <p>Danger of exceeding permissible intake gas volume</p> <p>When sending N₂ gas or dry air into air-flush port, pressure should be the same as atmospheric pressure and flow rate should be less than 9L/min. If not, it can increase pressure inside vacuum pump, resulting in failure.</p> |
|  <p>Caution for frequent start/stop and short interval</p> | <p>Risk of motor malfunction</p> <p>Refrain from frequent start/stop operation. It induces malfunction of motor such as burn out. Please consult your distributor or factory representative for details. Appropriate operating mode with adequate interval and frequency of start/stop is varies owing to operating condition.</p> |  <p>Disposal</p> | <p>Dispose the pump and removed components safely in accordance with all national/local safety and environmental requirements. Particular care must be taken with the pump and components that have been contaminated with dangerous substances from the process.</p> |
|  <p>Disposal of the time counter</p> | <p>Never dump the time counter into the fire since the lithium battery is installed. Dispose the time counter according with your national/local safety and environmental requirements.</p> |  <p>Disposal of the lithium battery in the time counter</p> | <p>Dispose the lithium battery itself in the time counter according with your national/local safety and environmental requirements. Never dump the lithium battery into the fire. Dispose the battery covering the terminal (+,-) with insulating adhesive taps in order to avoid contact with other metallic materials which might occurs heat generation, explosion and ignition.</p> |

Where to attach warning stickers

Where to attach warning stickers

Always keep warning stickers clean and legible. If they become dirty or detached, replace them with new ones. If you need replacement stickers, contact our sales branches who sold the vacuum pump to you.

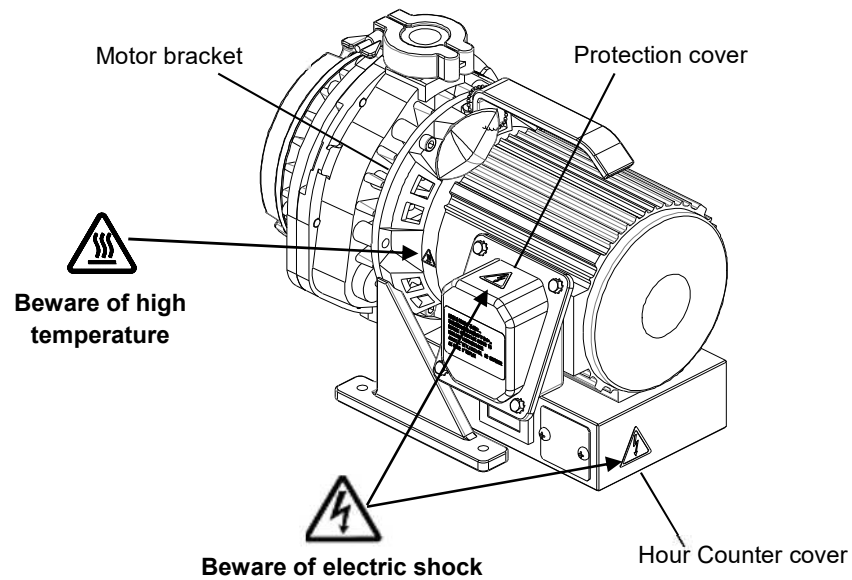

Contents


| | |
|--|----|
| Important information | 1 |
| For safe operation | 2 |
| Contents | 7 |
| 1. Before use | 8 |
| 1.1 Check the product | 8 |
| 2. Name and structure of each section | 10 |
| 3. Installation..... | 11 |
| 3.1 Wiring..... | 12 |
| 3.2 Test operation | 16 |
| 3.3 Connection to vacuum system (chamber)..... | 17 |
| 4. Operation..... | 18 |
| 4.1 Air-flush closed operation | 20 |
| 4.1.1 Start-up | 20 |
| 4.1.2 Shut-down..... | 20 |
| 4.2 Air-flush opened operation..... | 21 |
| 4.2.1 Preparation | 21 |
| 4.2.2 Start-up and shut-down..... | 22 |
| 4.2.3 When returning to air-flush closed operation | 22 |
| 5. Maintenance and inspection | 23 |
| 5.1 Daily maintenance and inspection | 23 |
| 5.2 Maintenance | 24 |
| 6. Problems and remedies..... | 25 |
| 7. Disposal..... | 25 |
| 8. Specifications | 26 |
| 8.1 Specifications | 26 |
| 8.2 Dimensions | 27 |
| | 27 |
| 8.3 Performance data | 28 |
| 9. Warranty and After-sales service | 30 |
| 9.1 Warranty | 30 |
| 9.2 After-sales and service | 30 |
| Vacuum Pump Check Sheet For Repair | 31 |

1. Before use

1.1 Check the product

- Check that the package is right-side-up before opening.
- Check that the model of the product is the same as the one you ordered.

How to read model name

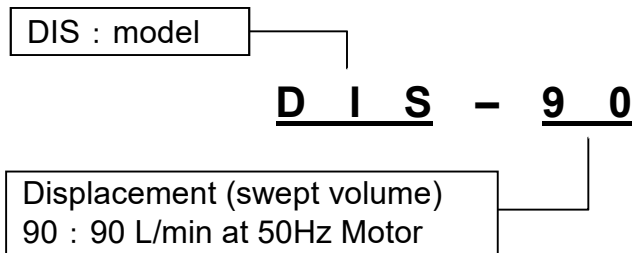


- **Check that there is no damage.**

If there is any damage, contact either our sales branches who sold it to you or local sales offices.

- **Check the following accessories.**

Instruction manual (this one)

Air-muffler for air-flush (Which is attached to handle of motor.)

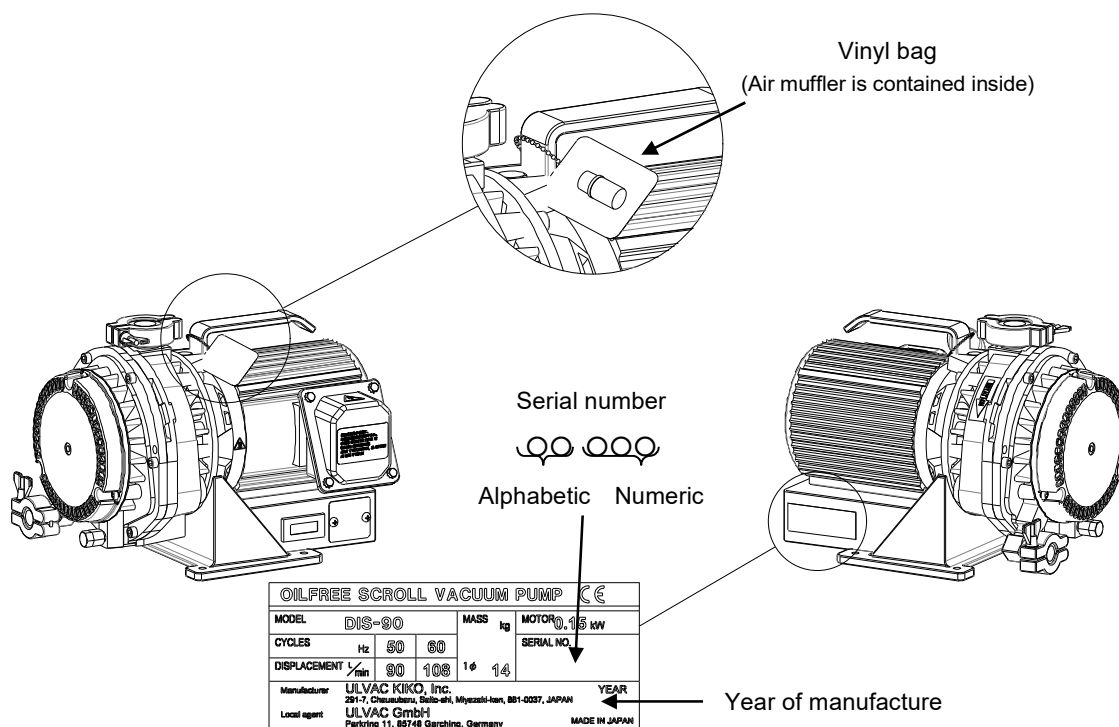

※Please prepare electric source cables, crimp-style terminal, electric source protective devices, piping to inlet, and piping from outlet on customer side.

Open package



WARNING


Danger of cargo collapse

Hold the motor handle of the product (DIS-90 mass 14kgs) firmly, when installing vacuum pump.



If not, it can cause damage, failure or bodily injury from falling vacuum pump, or by being caught between vacuum pump and other material.



Be careful about lifting

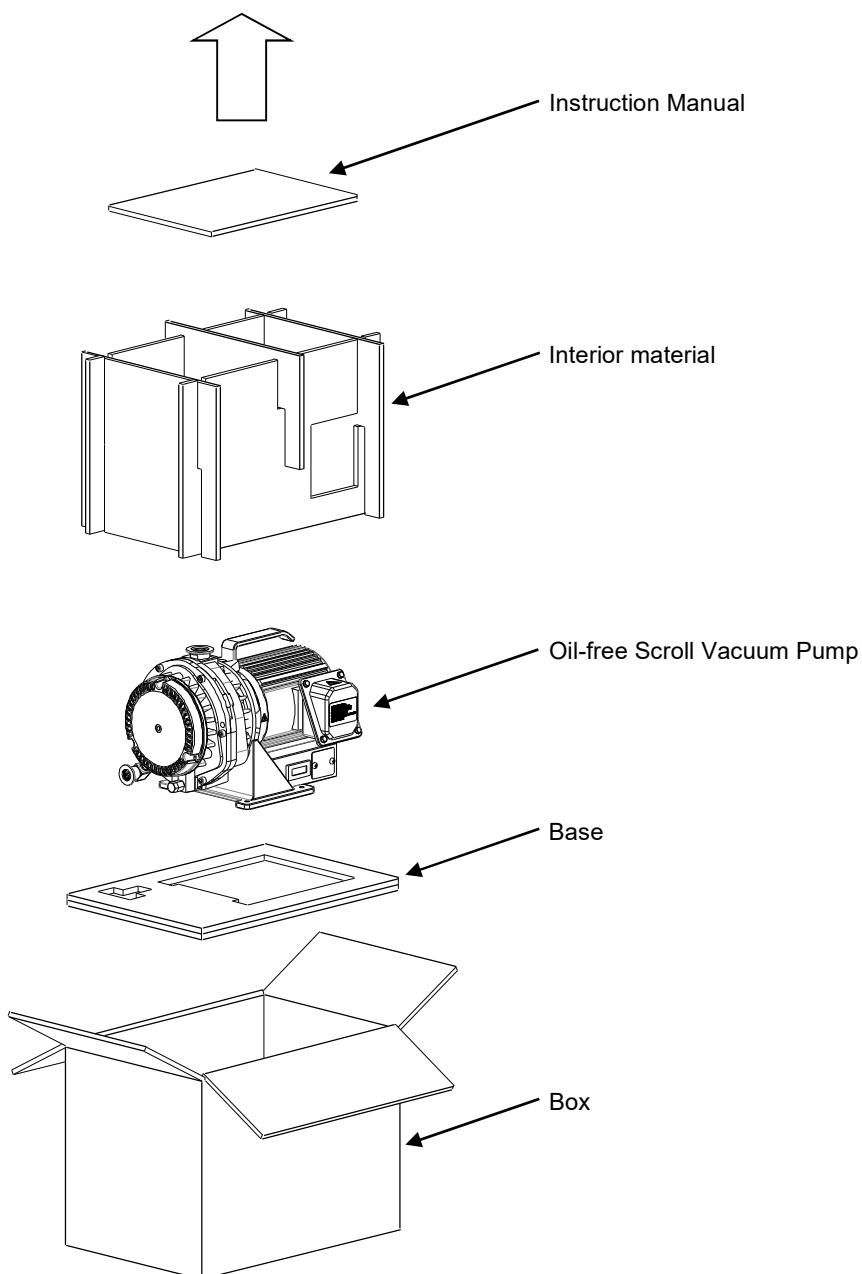



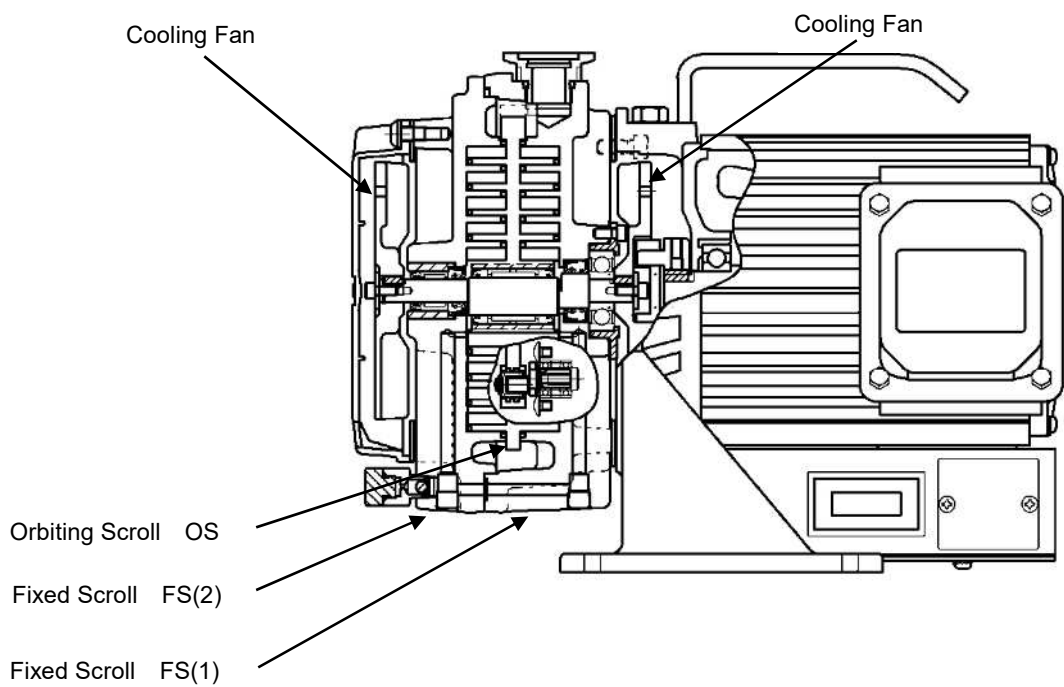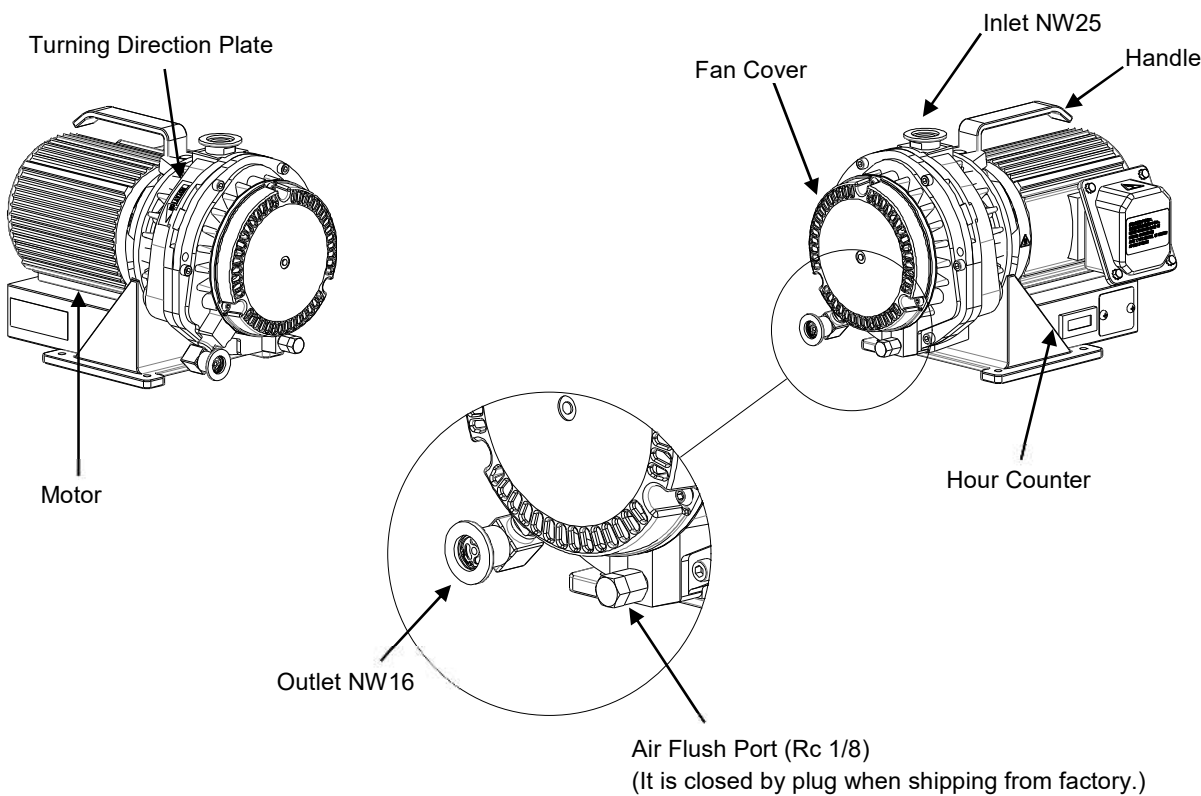


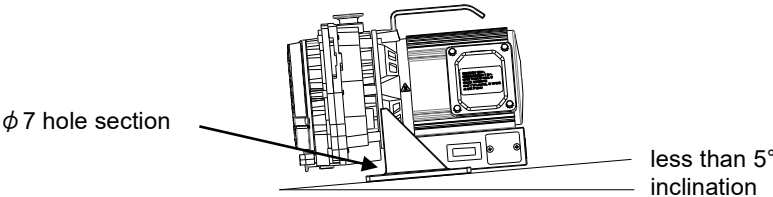




2. Name and structure of each section
















Structure of vacuum pump




3. Installation

| <div>WARNING</div> | | | | |
|--|---|--------|----------------------------|--|
| Danger of electric shock Install in an area which is not exposed to moisture such as rain or steam. If moisture comes into and tact with the electric source connection, it can cause fire or bodily injury due to short-circuit or electric shock. | <div></div> <div>Avoid moisture</div> | | | |
| Danger of explosion, fire or accident Install in an area free from explosive, flammable or corrosive substances. If not, it can cause explosion, fire or accident. | <div></div> <div>Install at a safe site</div> | | | |
| <div>CAUTION</div> | | | | |
| Danger of overheating Operate at ambient temperature of 5°C~40°C. Operating at a temperature range other than that designated can cause accident, failure or bodily injury such as burns due to overheating. | <div></div> <div>Use at designated temperature</div> | | | |
| Danger of overheating Install in a well-ventilated area (refer to below chart). Poor ventilation can disrupt cooling and cause accident, failure or bodily injury such as burns since this vacuum pump is an air-cooled type. <table border="1"><tr><td>Necessary ventilated air volume</td></tr><tr><td>DIS-90</td></tr><tr><td>Over 2 m³/min</td></tr></table> | Necessary ventilated air volume | DIS-90 | Over 2 m ³ /min | <div></div> <div>Pay attention to ventilation</div> |
| Necessary ventilated air volume | | | | |
| DIS-90 | | | | |
| Over 2 m ³ /min | | | | |
| Danger of dust Be sure site is free from dust. Sucking in of dust can cause failure. | <div></div> <div>Avoid dust</div> | | | |
| Danger of unbalance Be sure to install on solid and level floor (less than 5° inclination). Uneven installation can cause failure and movement of vacuum pump. If installation floor is unstable, fix pump base with 4- φ 7 holes of pump leg (DIS-90). <div></div> | <div></div> <div>Install on a solid, level floor</div> | | | |
| Danger of overheating Install where equipment is not exposed to direct sunlight. Vacuum pump exposed to direct sunlight can overheat, resulting in failure. | <div></div> <div>Avoid direct sunlight</div> | | | |
| Important | | | | |
| When building vacuum pump into vacuum system, pay attention to space for maintenance, ambient temperature and piping. Be sure to fix vacuum pump on solid and level floor. If you have any questions, contact our sales branches who sold it to you or local sales offices. | | | | |



3.1 Wiring

|  WARNING | |
|---|---|
| Danger of short-circuit and electric shock Ask a qualified electrician to perform electric wiring. If not, short-circuit or electric shock can cause fire or bodily injury. |  Ask qualified electrician |
| Danger of electric shock and entanglement Be sure to turn off electric source on building site before wiring. If not, it can cause electric shock or bodily injury due to turning objects. |  Turn off electric source |
| Danger of accident, fire and failure Be sure to install protective device to protect circuitry. We recommend overcurrent protective device (rated 15A) to protect branch circuit. If equipment is not stopped in an emergency, it can cause accident, fire or failure. |  Install overcurrent protective device |
| Danger of accident, fire or failure Be sure to install an electric source emergency stop switch (or protective device that can urgently stop). If equipment is not stopped in an emergency, it can cause accident, fire or failure. |  Install emergency stop switch |
| Danger of fire and electric shock Install short circuit protective device. If not, it can cause bodily injury due to fire or electric shock. |  Install short circuit protective device |
| Danger of electric fire and electric shock (refer to chart 1 on page 14) Install motor protective circuit breaker to protect motor. If not, bodily injury due to electric fire or electric shock can result. If you have any questions about the selection of protective devices, contact either our sales branches who sold it to you or local sales offices. |  Install motor protective circuit breaker to protect motor |
| Danger of short-circuit and electric shock We recommend an electric source cable of more than 2mm² (more than rated 10A) cross section area for electric source cable and earth cord. Be careful to avoid voltage drop considering local situation. If not, it can cause a short-circuit fire and may result in bodily injury from electric shock. |  Be careful about wiring |
| Danger of short-circuit and electric shock Fit firmly proper round type crimp-style terminal to electric source cable using crimp tool and connect to motor terminal section. If not, it can cause short-circuit fire or bodily injury from electric shock due to looseness or disconnection. |  Use crimp-style terminal |
| Danger of short-circuit and electric shock Be sure to fit cable-gland to hole of ϕ 22mm at motor terminal box. If not, it can cause short-circuit fire or bodily injury from electric shock. |  Protect cable from being pulled |
| Danger of short-circuit and electric shock The power-supply conductor shall be free from strain including twisting by using cord anchorage, which is specified by the local electrical wiring regulation. If not, it can cause short-circuit fire or bodily injury from electric shock. |  Protect cable from being pulled |
| Danger of electric shock Connect earth cord to earth terminal in motor terminal box. If not, it can cause bodily injury from electric shock. |  Be sure to ground |

| | |
|--|--|
| <p>Danger of restart</p> <p>Be sure to switch off electric source before maintenance or inspection. Single-phase motor has a thermal protector.</p> <p>Vacuum pump restarts become cool without warning after vacuum pump.</p> |  <p>With a thermal protector</p> |
| <p>CSA Requirement</p> <p>Thermally protected automatic reset. TYPE TP212. Motor restart without warning after protector trip.</p> <p>Min. circuit ampacity of conductor is 10A Max. branch circuit breaker is 15A</p> <p>When you used this pump in Europe.</p> <p>This vacuum pump must be equipped with a main disconnect device in accordance with requirements of EN60204-1, clause 5.3.2. It is recommended to use a circuit breaker as main breaker which is suitable for isolation according to EN60947-2 and is equipped with an operating handle which is lockable in OFF position and complies with the other requirements of EN60204-1, clause 5.3.</p> | |

| | |
|---|--|
|  <p>CAUTION</p> | |
| <p>Motor burnout</p> <p>Before doing any wiring, check electric source and voltage. This pump is a multi voltage type of AC100V/AC200V. <u>Voltage can be changed at terminal block.</u> <u>This pump is wired to 200V when shipping from factory.</u> Check your electric source, voltage, and cord correctly to terminal block. Improper wiring and incorrect voltage can cause motor burnout.</p> |  <p>Check voltage</p> |
| <p>Danger of problem recurrence and failure</p> <p>If protective device or thermal protector activates, be sure to turn off electric source and inspect causes to solve the problem. Do not operate until problem is solved. Operation while problem is left unsolved can cause problem recurrence and failure.</p> |  <p>Inspect cause of problem</p> |

This shows 200V connection.

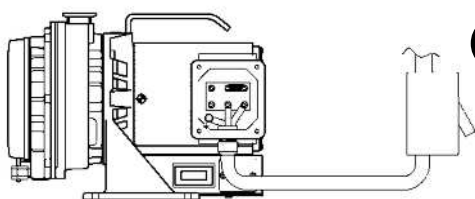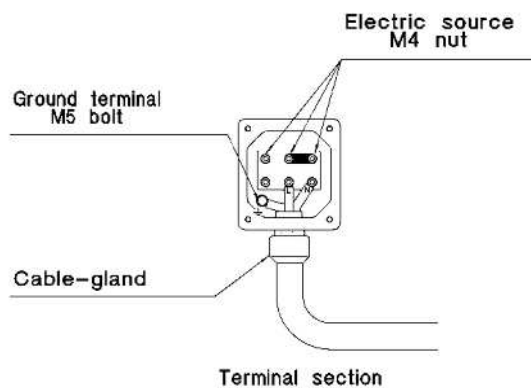

Activate the emergency stop by electric source switch or protective device.



Avoid motor burnout by protective device (chart 1).



Use rated over 10A electric source cable and earth cord.



Use round type terminal.



Fit cable-gland.




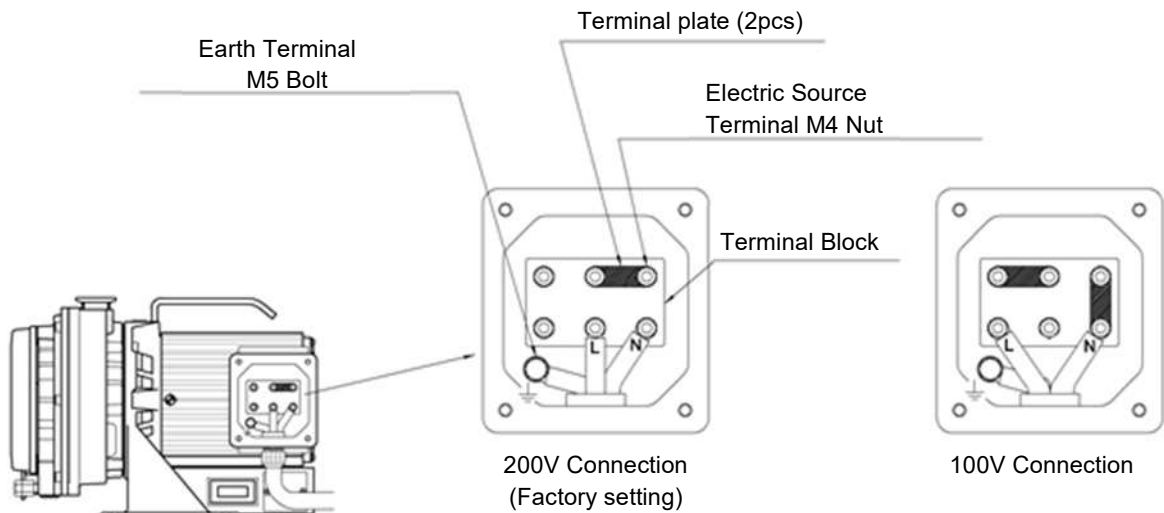
Connect earth cord to earth terminal.

Chart-1

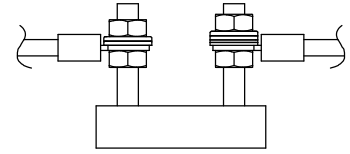


| Single-phase specifications | | |
|-----------------------------|-----------------|--|
| Voltage V | Frequency Hz | Recommended protective device (or breaker) capacity A |
| | | DIS-90 |
| 100 | 50 | 3.0 |
| 100 | 60 | 2.5 |
| 115 | 60 | 2.5 |
| 200 | 50 | 1.5 |
| 200 | 60 | 1.3 |
| 230 | 50 | 1.9 |
| 230 | 60 | 1.3 |

How to wire

- ① Remove 4pcs. of M5 bolt at motor terminal box and remove protection cover.
 ※Be sure to keep M5 bolts and washer, which were removed from the protection cover.
- ② Wiring diagram is shown inside protection cover.
- ③ Please tighten a terminal plate and a cable with the nut of the top and bottom from the terminal surface at about 5mm positions like a figure.
 You can change to a 100V or 200V connection by changing terminal plate (2pcs.).
※It is wired to 200V when shipping from factory.
- ④ If you want to change to a 100V connection, remove M4 nut of electric source terminal and change terminal plate as illustrated below.
- ⑤ Connect electric cable to terminal by using cable-gland at $\phi 22\text{mm}$ hole of motor terminal box.
- ⑥ Insert electric source cable through cable-gland on the bottom side of terminal box.
- ⑦ Connect each phase L-N to each electric source terminal respectively in accordance with the below wiring diagram.
 Terminal screw nuts should be torqued between $1.2 \text{ N} \cdot \text{m}$ and $1.5 \text{ N} \cdot \text{m}$.
- ⑧ The protective earth cord shall be suffice in length and put up to keep the cord the last to take the strain if the cable slips in its anchorage.




3.2 Test operation

| <div style="text-align: center;">  CAUTION </div> | |
|---|--|
| Danger of exhaust disruption Remove blank flange from inlet and outlet. Operation with blank flange being fitted can disrupt air flow or cause blank flange to fly by exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects. |  Remove blank flange |
| Danger of foreign matter entering inlet When checking turning direction, be careful not to enter foreign matter into an inlet. Foreign matter entering inlet can cause failure. |  Prevent foreign matter from entering |

Test operation

- ① Open inlet and outlet
Remove blank flanges (2 places)
from inlet and outlet of vacuum pump.
- ② Check turning direction
Open inlet, turn on electrical source to start operating vacuum pump.
Vacuum pump turns clockwise when viewed from motor side.

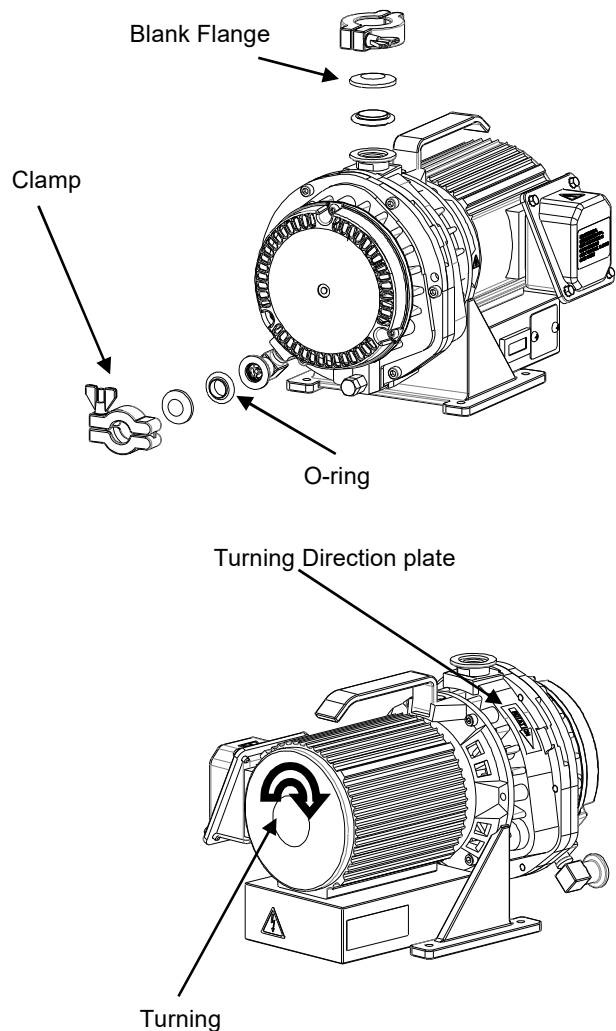

Check that comes out of air outlet.

If you fit pump to vacuum system and control operation of vacuum pump by remote control, **first check pump itself for turning direction** and then fit it to vacuum system.

3.3 Connection to vacuum system (chamber)

Inlet is NW25 and outlet is NW16.



CAUTION

Danger of exhaust disruption

When connecting exhaust piping to vacuum pump and when combining piping with another vacuum pump, pay attention to piping size and length so that it does not cause exhaust resistance.

Exhaust resistance can disrupt air flow, resulting in failure and over-current.



Pay attention to exhaust resistance

Important

Use isolation valve between vacuum system and inlet.

Isolation valve is necessary to prevent the drawback of debris attached to the inside of vacuum pump into the vacuum chamber during start-up and shut-down. (We recommend the use of leak valve also). We recommend the use of an automatic valve as the isolation valve which closes during power failure in order to prevent the drawback of debris inside pump into the vacuum chamber during power failure.

Use the clean connecting pipe between vacuum chamber and vacuum pump.

We recommend the use of a flexible tube between inlet of vacuum pump and vacuum chamber so that vibration of pump does not transmit to vacuum chamber.

When connecting exhaust piping to outlet of vacuum pump, refer to the following size and length.

- max. 30m direct pipe length for exhaust pipe size NW16 (inner dia.16)


But if pipe length becomes longer, use a larger size exhaust pipe.

Make sure that exhaust piping is not clogged during pump operation.

Make sure that pressure at outlet does not exceed atmospheric pressure at any conditions.

In order to keep condensation away from feeding into the exhaust port, take proper measure.



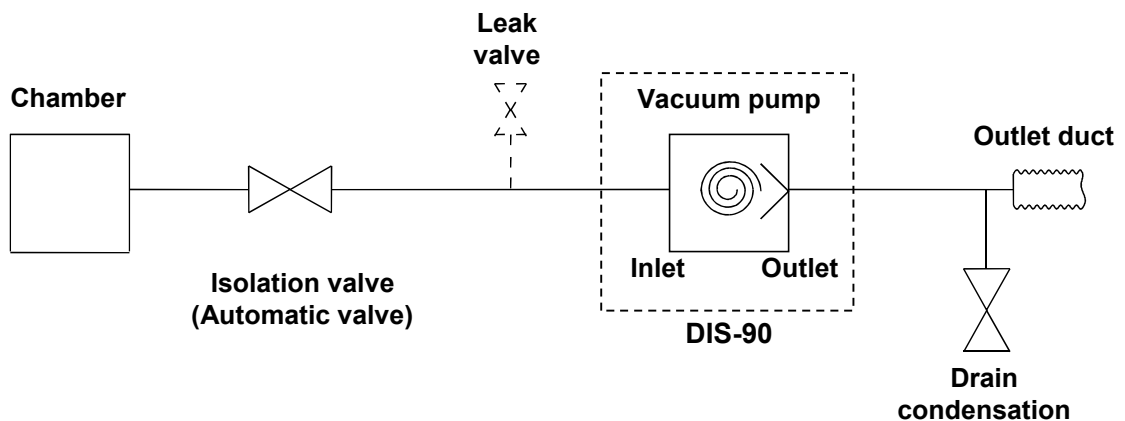


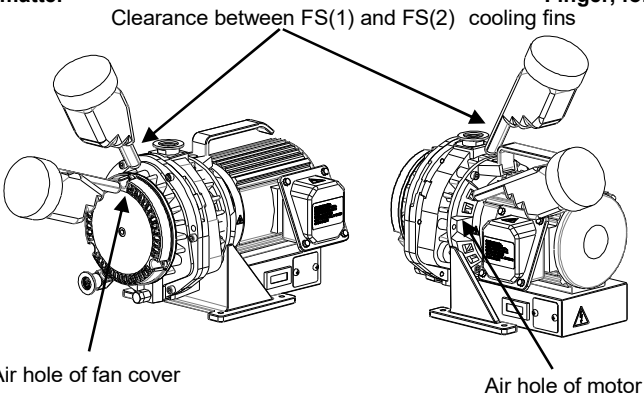



It causes exhaust disturbance. Drain condensations periodically by using valve separately arranged.



4. Operation

Be sure to use the procedure below to start up or shut down the pump.

- When you do not use air-flush device,
proceed 4.1 Air-flush closed operation [page 20].
- When you use air-flush device,
proceed 4.2 Air-flush opened operation [page 21].

| <div style="text-align: center;">  WARNING </div> | |
|--|---|
| <p>Danger of explosion and ignition</p> <p>Do not evacuate gas which is hazardous to humans or explosive, flammable, or corrosive. Do not evacuate with substances containing chemicals, solvents, and powders.</p> <p>If done, it can cause failure or bodily injury by gas, explosion or ignition.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <div style="display: flex; align-items: center;">  <div style="margin-left: 5px;">Do not pump</div> </div> <div style="margin-top: 10px;"> <ul style="list-style-type: none"> · Toxic gas · Explosive gas · Flammable gas · Corrosive gas · Chemicals · Solvent · Powder <div style="display: flex; justify-content: flex-end; margin-top: 5px;"> <ul style="list-style-type: none"> · Water · Liquid </div> </div> </div> <p>※When evacuating vapor, operate in accordance with 4.2 [page 21].</p> |  Never evacuate hazardous gas |
| <p>Danger of entanglement and foreign matter dispersal</p> <p>Never put finger or foreign matter into air hole of fan cover, air hole of motor or clearance between FS(1) and FS(2) cooling fins.</p> <p>If done, it can cause bodily injury from entanglement with turning section, or foreign matter dispersal.</p> <div style="display: flex; justify-content: space-around; align-items: flex-start; margin-top: 20px;"> <div style="text-align: center;">  Finger, foreign matter </div> <div style="text-align: center;">  Finger, foreign matter </div> </div> <div style="text-align: center; margin-top: 10px;">  </div> |  Avoid foreign matter |
| <p>Danger of electric shock and entanglement</p> <p>Do not remove or alter safeguards or insulation parts.</p> <p>If done, it can cause bodily injury from electric shock or turning section and it can cause deteriorated performance and operating lifetime, and invalidate guarantee.</p> |  Never alter |
| <p>Danger of failure and bodily injury</p> <p>Change air-flush port only after vacuum pump is stopped.</p> <p>If you change it during vacuum pump operation, it can cause vacuum pump failure and bodily injury.</p> |  Change after vacuum pump is stopped |



CAUTION

| | |
|--|--|
| Danger of exhaust disruption Remove blank flange from inlet and outlet. Operation with blank flange being fitted can disrupt exhaust or cause blank flange to fly by exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects. |  Remove blank flange |
| Danger of vacuum break and pollution Be sure to close isolation valve between vacuum pump and vacuum system (chamber) during start-up and stop. Start-up or stop with isolation valve in the open position can draw back gas and debris attached to inside of pump to vacuum chamber due to pressure differential, resulting in vacuum break and pollution on vacuum chamber side. |  Start or stop after closing isolation valve |
| Danger of abnormal sound and failure Open inlet to atmosphere for about 5 seconds before restarting vacuum pump. If not, it can unbalance temperature inside vacuum pump, resulting in failure. |  Open air inlet |
| Danger of exceeding permissible temperature of intake gas If intake gas temperature is over 50°C, be sure to install a chiller or trap between vacuum pump and vacuum chamber so that gas intake temperature of vacuum pump keeps below 50°C. If not, vacuum pump temperature can increase, resulting in failure. |  Beware temperature of intake gas |
| Danger of remaining moisture When evacuating moisture, be sure to open air-flush port (air-flush opened operation). If you evacuate vapor while air-flush port is closed, condensed water will remain inside vacuum pump and cause failure. |  Operate while opening air-flush port |
| Danger of insufficient vapor exhaust After evacuating vapor, do air-flush opened operation for at least one hour. If you close air-flush port or stop vacuum pump soon after evacuating vapor, condensed water will remain inside vacuum pump which will cause failure. |  Caution after exhausting vapor |
| Danger of exceeding permissible intake gas volume When sending N₂ gas or dry air into air-flush port, pressure should be the same as atmospheric pressure and flow rate should be less than 9L/min. If not, it can increase pressure inside vacuum pump, resulting in failure. |  Beware of intake gas volume |
| Risk of motor malfunction Refrain from frequent start/stop operation. It induces malfunction of motor such as burn out. Please consult your distributor or factory representative for details. Appropriate operating mode with adequate interval and frequency of start/stop is varies owing to operating condition. |  Caution for frequent start/stop and short interval |

Important

If it takes time to reach ultimate pressure of pump during initial operation (also operation after pump has not been used for a long time),

Close inlet, and continue operation for 6~8 hours while opening inlet for 3~5 seconds to atmosphere 2~3 times per hour. During pump stoppage, moisture might have entered inside of pump and deteriorated performance to reach ultimate pressure.

If pump has evacuated liquid such as water or high humid air (over 60%RH),

Moisture can deposit inside pump and cause pump failure. In that case, close isolation valve, and open inlet to atmosphere for 3~5 seconds several times and exhaust moisture inside pump to outside.

If pump has continued operation around ultimate pressure or continuously evacuated high humid gas

Moisture can be condensed and remains inside pump, causing insufficient ultimate pressure and failure.

In that case, do air-flush opened operation in accordance with 4.2 [page 21].

4.1 Air-flush closed operation

4.1.1 Start-up

- ① Check that blank flange of outlet is removed.
- ② Close isolation valve in order to prevent the drawback of debris attached to the inside of vacuum pump into vacuum chamber due to pressure differential, resulting in vacuum break and pollution.
(Open leak valve if you use leak valve).
- ③ Turn on vacuum pump.
Please install an external power switch or protective device (breaker) before letting vacuum pump operate.
- ④ Check start-up of vacuum pump and open isolation valve (close leak valve soon after start-up if you use leak valve) and evacuate vacuum chamber.

Important

When continuously operating pump at around ultimate pressure (for example, using as fore line pump of turbo molecular pump) ,

It can cause foreign matter or moisture to deposit inside pump, resulting in failure.

In that case, do air-flush opened operation or close isolation valve and open inlet to atmosphere for 3~5 seconds, 3~5 times daily.

Be careful not to damage air-flush port (especially air-muffler section).

If not, it can cause failure.

When doing air-flush opened operation,

Noise level will increase (by 7~8dB).

Install pump in an area which is not exposed to debris such as iron powder, stone powder, polish powder or wood dust.

Debris can clog air-muffler, undercutting air-flush effect.

4.1.2 Shut-down

- ① Be sure to close isolation valve in order to prevent the drawback of debris attached to inside of vacuum pump into vacuum chamber during operation due to pressure differential (open leak valve if you use leak valve).
- ② Turn off vacuum pump.
Please install an external power switch or protective device (breaker) before letting vacuum pump operate.
- ③ Check shut-down of vacuum pump.

Important

Be sure to close isolation valve between vacuum pump and vacuum chamber during pump shut-down.

If vacuum pump stops during air-flush opened operation, atmospheric air is drawn back from air-flush port to inside of vacuum pump, and vacuum on chamber side cannot be maintained. Be sure to close isolation valve between vacuum pump and vacuum chamber to prevent the drawback of debris from vacuum pump into vacuum chamber before stopping vacuum pump.

When returning air-flush opened operation to air-flush closed operation, operate as per 4.2.3[page 22].

4.2 Air-flush opened operation

This pump is equipped with air-flush port. Before evacuating vapor, read precautions below completely and be sure to understand the contents.

Purpose of air-flush

Evacuating moisture or humid gas by vacuum pump can cause condensed water to remain in pump. This remaining water can cause failure of ultimate pressure or pump. Air-flush opened operation is necessary to exhaust the remaining water inside. Air-flush opened operation does not only exhaust moisture but also restores ultimate pressure.

※Vapor disposal volume is max. 5g/day, when doing air-flush opened operation(ambient temperature 25°C, humidity 60%RH).

Important

Maintenance interval of this pump is based on clean gas applications The standard differs when evacuating vapor.


You must shorten maintenance interval (5.2 [page 24]) when evacuating vapor since vapor temperature, disposal volume, disposal frequency and substances in vapor have an influence on pump operation. When evacuating vapor, pay attention to all WARNING, CAUTION and Important notes (4 [page 18~19]).

4.2.1 Preparation

Before starting air-flush opened operation, first stop vacuum pump and proceed in accordance with the following procedure. Never try to do air-flush opened operation during operation.

Fit air-muffler

- ① Stop vacuum pump.
 - ② Remove plug from air-flush port with a spanner (nominal dia. 13mm).
 - ③ Lightly fit the attached air-muffler to air-flush port.
- ※Store the removed plug and do not misplace it.

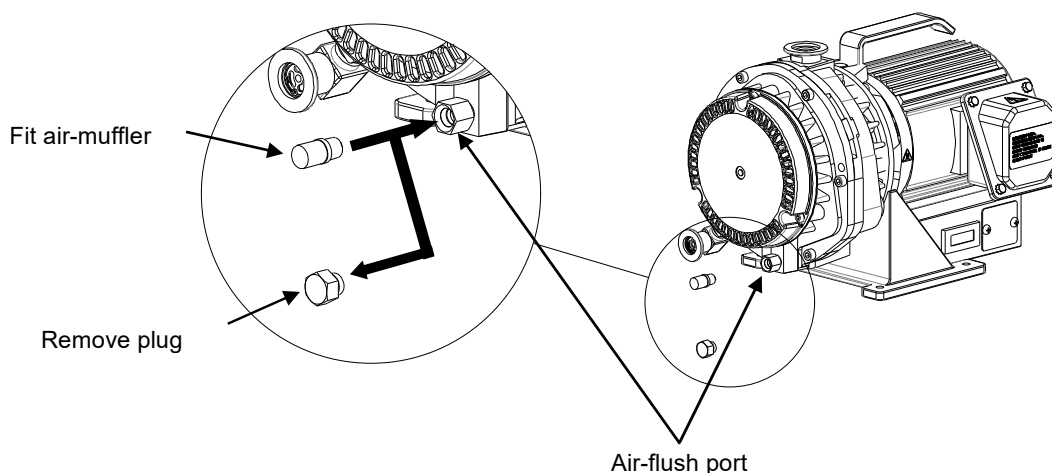

4.2.2 Start-up and shut-down

- ① Start vacuum pump according to 4.1.1 Operation [page 20].
- ② Stop vacuum pump according to 4.1.2 Shut-down[page 20].

Important

Continuous evacuating of humid gas

When evacuating vacuum chamber while humidity in chamber is high, moisture volume drawn into pump differs according to temperature and pressure in chamber.

When pumping vacuum chamber containing humid gas, be sure to open air-flush port and operate pump (air-flush opened operation).

Be careful not to damage air-flush port (especially air-muffler section) .

Damage to air-flush port can cause failure.

When doing air-flush opened operation

Noise level will increase (by 7~8dB).

Install pump in an area which is not exposed to debris such as iron powder, stone powder, polish powder or wood dust.

Debris can clog air-muffler, undercutting air-flush effect.

Be sure to close isolation valve between vacuum pump and vacuum chamber during pump shut-down.

If vacuum pump stops during air-flush opened operation, atmospheric air is drawn back from air-flush port to inside of vacuum pump, and vacuum on chamber side cannot be maintained. Be sure to close isolation valve between vacuum pump and vacuum chamber to prevent the drawback of debris from vacuum pump into vacuum chamber before stopping vacuum pump.


When operating with air-flush OFF (closed), operate as per 4.2.3[page 22].

4.2.3 When returning to air-flush closed operation





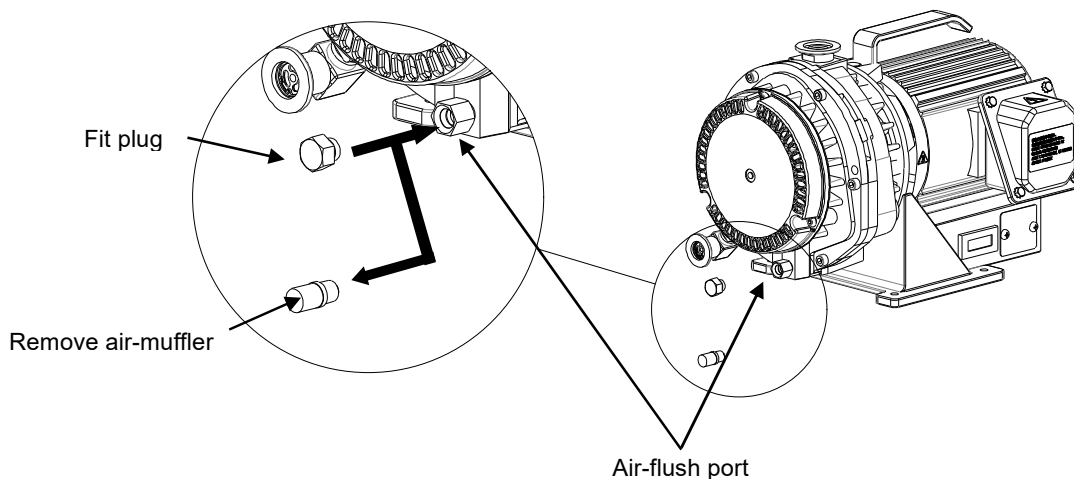

Before starting air-flush opened operation, first stop vacuum pump and proceed in accordance with the following procedure. Never perform this procedure during operation.

Remove air-muffler

- ① Stop vacuum pump.
 - ② Remove air-muffler from air-flush port.
 - ③ Lightly fit plug to air-flush port with a spanner (nominal dia. 13mm).
- ※When restarting air-flush opened operation, refer to 4.2.1~4.2.2[page 21~22] and prepare and start.
- ※Store removed air-muffler and pay attention not to misplace it.



5. Maintenance and inspection

|  WARNING | |
|---|---|
| Danger of failure and bodily injury Conduct periodical maintenance and inspection. If not, it can cause insufficient performance, failure of vacuum pump, and bodily injury. |  Conduct periodical maintenance and inspection |
| Danger of burns Conduct maintenance and inspection only after vacuum pump becomes cool enough. Maintenance and inspection soon after vacuum pump stops can cause burn injury. |  Be careful about high temperature |
| Danger of restart Be sure to switch off electric source before maintenance or inspection. Single-phase motor has a thermal protector. Vacuum pump restarts become cool without warning after vacuum pump. |  With a thermal protector |
| Danger of electric shock Be sure to conduct maintenance and inspection after you turn off electric source. If not, it can cause bodily injury from electric shock or turning object. |  Turn off electric source |
| Danger of accident, failure and shorter operating lifetime Ask specialist to perform repairs. Defective repairs can cause accident, failure or shorter operating lifetime. |  Ask specialist to perform repairs |

5.1 Daily maintenance and inspection

Conduct the following daily maintenance and inspection.

| Items | Contents | Measures |
|--------------------------|-----------------------------------|---|
| Vacuum pump itself | Abnormal sound | Ask specialist to repair. |
| | Abnormal vibration | Ask specialist to repair. |
| | Abnormal temperature | Ask specialist to repair. |
| | Cooling fins are dirty or clogged | Blow air, cleaning |
| Cooling fan Fan cover | Abnormal rotation | Ask specialist to repair. |
| | Dirty, clogged, damaged | Blowing air, clean, Ask specialist to repair. |
| Air-muffler | Dirty, clogged | Replace |
| Exhaust valve | Dirty, clogged | Blowing air, clean |
| Electric source cable | Deteriorated | Replace |

5.2 Maintenance

When maintenance interval has elapsed, be sure to contact our distributor who sold it to you. This vacuum pump requires maintenance conducted only by our authorized specialist. Never try to disassemble, reassemble or alter on user's side. We are not responsible for any accidents caused by disassembly, reassembly or alteration which was done by the user or non-specialist.

The following parts are consumable and need to be replaced periodically.

Whenever something goes wrong with them, replace them immediately.

| Where to inspect | Maintenance interval | | Every 400 times vapor pumping |
|--------------------|--------------------------------|-------------------------------------|----------------------------------|
| | Yearly or every 8,000 hours | Biennially or every 16,000 hours | |
| Bearing kit | grease / Δ | \bigcirc | Δ |
| Tip seal set | Δ | \bigcirc | Δ |
| Seal set | \bigcirc | \bigcirc | Δ |
| O-ring set | \bigcirc | \bigcirc | Δ |
| Exhaust valve set | \bigcirc | \bigcirc | Δ |
| Air-flush kit | \bigcirc | \bigcirc | \bigcirc |
| Pin crank kit | Δ | Δ | Δ |
| Vacuum pump itself | Inside cleaning / Δ | Inside cleaning / Δ | Inside cleaning / Δ |

\bigcirc . . . Replace

Δ . . . Replace if something goes wrong.

Note 1 : Maintenance interval should be shorter than either the period or operating hours.

Note 2 : When you want further maintenance and inspection after either the 6th year or 48,000 operating hours, please contact our distributor who sold it to you.

Important

Causes of failure

Shorten maintenance interval if conditions of installation or operation are unfavorable.

In particular, ambient temperature has a great influence on failure. Maintenance interval is based on an ambient temperature 5~40°C and a yearly average ambient temperature 25°C.

Shorten the maintenance interval if temperature exceeds the foregoing. If not, it can cause failure.

Maintenance interval is not a guarantee period.

Exceeding maintenance interval

Operation exceeding maintenance interval increases risk of failure and accidents.

When maintenance interval has elapsed, be sure to contact either our sales branches who sold it to you or local sales.

6. Problems and remedies

If something goes wrong, refer to the following chart and remedy problems.

If you cannot solve your problems, please contact either our sales branches who sold it to you or local sales.

| Problems | Causes | Remedies |
|---|--|---|
| Motor does not rotate. | Protective device (or breaker) activates. | ※Inspect and repair. |
| | Electric source cable is loose or cut. | Check connection. Repair or replace. |
| | Voltage drops. | Check size and length of cable. |
| | Motor malfunctions. | ※ Inspect and repair. |
| | Pump malfunctions. Foreign matter enters. | ※Inspect and repair. |
| | Motor protection gear activates. | Air outlet is clogged. Reset thermal protector. ※Inspect and repair. |
| Motor stops soon. | Protective device (or breaker) activates. | ※Inspect and repair. |
| | Voltage drops. | Check size and length of cable. |
| | Motor malfunctions. | ※Inspect and repair. |
| | Pump malfunctions. Foreign matter enters. | ※Inspect and repair. |
| | Improper exhaust piping. | Check exhaust piping diameter and length. Air outlet is clogged. Remove blank flange from exhaust outlet. |
| | Motor protection gear activates. | Air outlet is clogged. Reset thermal protector. ※Inspect and repair. |
| Ultimate pressure is insufficient. | Air leaks from piping. O-ring is damaged. | Check tightness of piping. Replace. |
| | Moisture and solvent are drawn. | Open inlet to atmosphere and operate for a few minutes and then close inlet and operate for about 24 hours. Do air-flush opened operation. Install trap and filter. |
| | Number of motor revolutions drops. | Check wiring and voltage. ※Inspect and repair. |
| | Pump malfunctions. | ※Inspect and repair. |
| Abnormal sound, abnormal vibration | Connection becomes loose. | Tighten connection. ※Inspect and repair. |
| | The installation is not level. | Correct vacuum pump inclination within 5°. ※Inspect and repair. |
| | Foreign matter enters pump. | ※Inspect and repair. |
| | Motor malfunctions. | ※Inspect and repair. |
| | Pump malfunctions. | ※Inspect and repair. |

※ Contact our distributor who sold it to you.

7. Disposal

When a vacuum pump is disposed, please comply with local law and/or regulations such as the Waste Disposal Law.

8. Specifications

8.1 Specifications

| | | | | | | |
|---|---------------------------------------|------|---|------|------|------|
| Model | | | DIS-90 | | | |
| Displacement L/min | | 50Hz | 90 | | | |
| | | 60Hz | 108 | | | |
| Ultimate pressure Pa | | | ≤5 | | | |
| Leak tightness Pa · m ³ /s | | | ≤1.0x10 ⁻⁷ | | | |
| Max. inlet pressure | | | Atmospheric pressure | | | |
| Ambient operating temperature °C | | | 5~40 | | | |
| Motor | Type | | Single-phase induction motor, Totally-enclosed, 4-pole, Insulation Class B, IP44, Capacitor start, run, Thermal Protector TP212, Automatic reset type | | | |
| | Output kW | | 0.15 | | | |
| | Voltage V | | 100 | 115 | 200 | 230 |
| | Rated current A | 50Hz | 2.6 | — | 1.3 | 1.6 |
| | | 60Hz | 2.1 | 2.2 | 1.1 | 1.1 |
| | Revolution min ⁻¹ {rpm} | 50Hz | 1430 | — | 1430 | 1440 |
| | | 60Hz | 1730 | 1740 | 1730 | 1740 |
| Noise level 1m dB(A) (With air-flush ON) | | | ≤52 (≤57) | | | |
| Inlet connection | | | NW25 | | | |
| Outlet connection | | | NW16 | | | |
| Direction of inlet | | | Vertical | | | |
| Dimensions mm L×W×H | | | 308×214×225 | | | |
| Mass kg | | | 14 | | | |
| Cooling system | | | Air-cooled | | | |
| Others | | | With hour counter and air-flush | | | |

Note 1 : Pumping speed and ultimate pressure should remain the same whether air-flush system is used or not.

Note 2 : Maximum voltage allowance is + or - 10% from motor rating.

Note 3 : Noise level is measured at ultimate pressure in an anechoic room.

Note 4 : Leak tightness is measured while the product is stopped and air flush is shut off (closed).

Note 5 : Vapor handling volume is no more than 5g/day (at 25°C 60%RH) with air-flush opened operation.

Air-flush flow rate is 9L/min.

Note 6 : This product is wired for 200V at the factory.

Note 7 : Install branch circuit protection device for safety. Consult to qualified electrician for details.


Note 8 : This product is designed for indoor use. Install the product away from moistures or excessive humidity.

Note 9 : All data shown in this literature were measured based on our test standard and specific conditions.


Actual measurements are subject to change of conditions of use.

Note10 : The specification might change without a previous notice for the quality improvement.

8.2 Dimensions

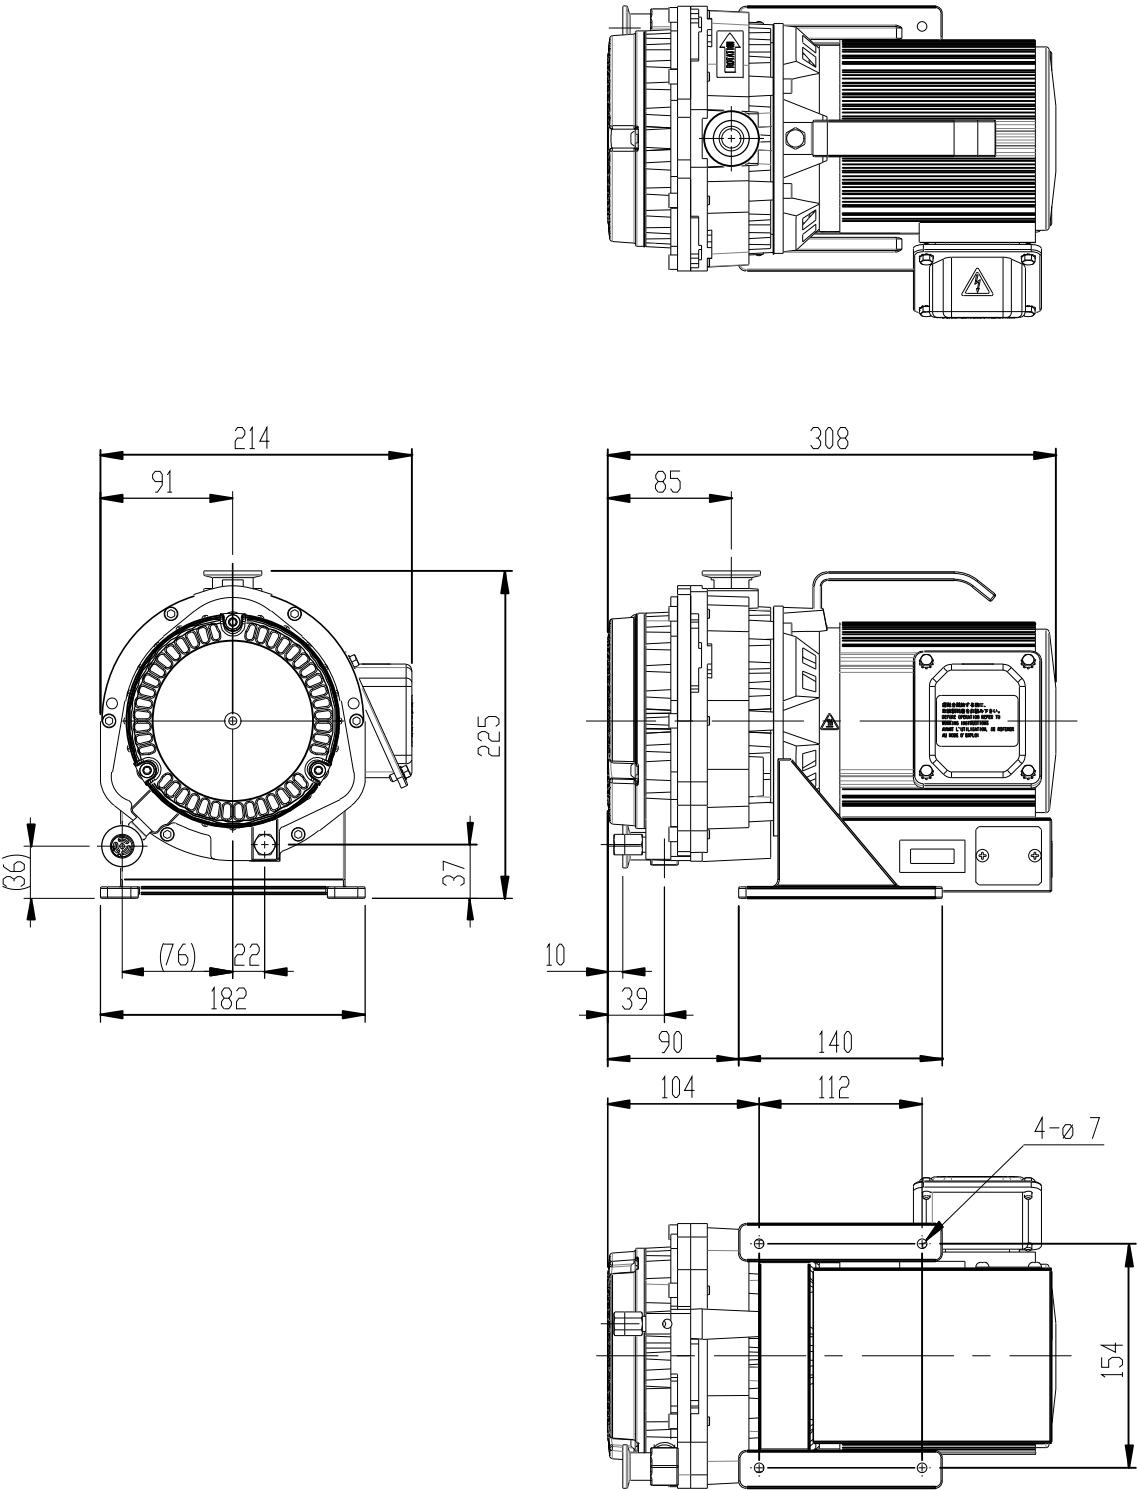

8.3 Performance data

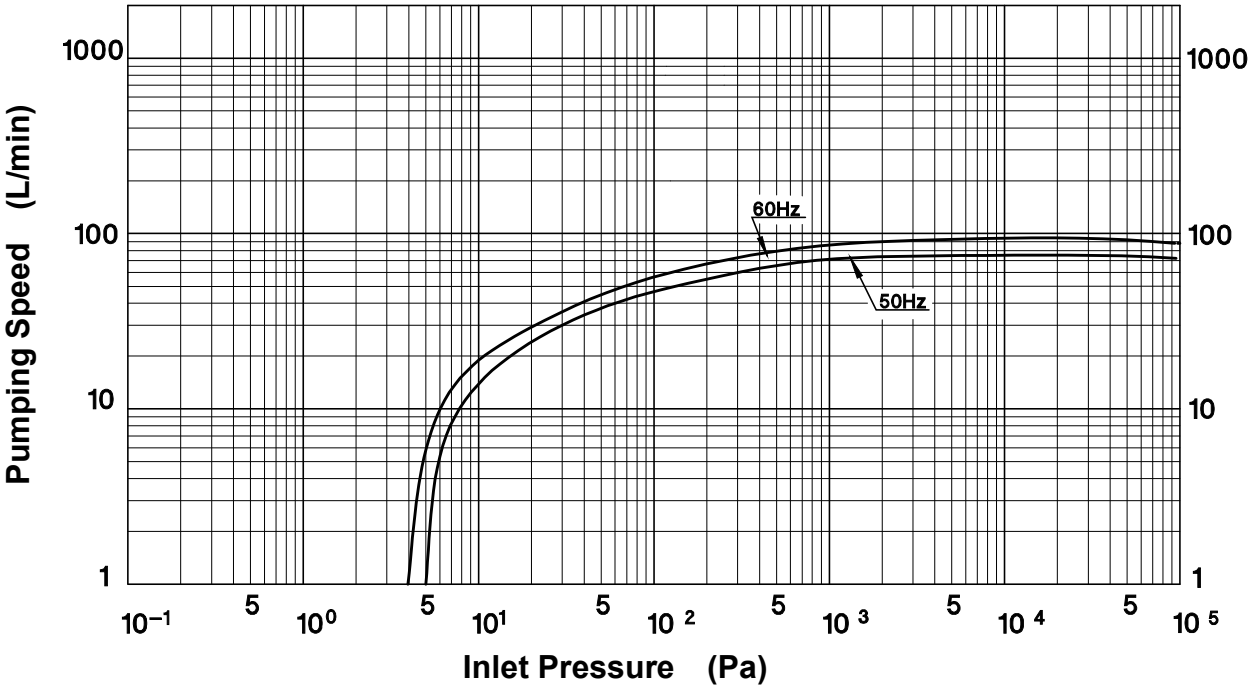

Memo

9. Warranty and After-sales service

9.1 Warranty

The warranty period of the scroll dry vacuum pump shall be one year from the date of delivery to a place designated by the customer or 8,000-hour operation whichever comes faster. ULVAC KIKO warrants that any part of the product excluding the consumables that proves to be defective within the warranty period even though the scroll dry vacuum pump is properly operated according to this instruction manual will be repaired or replaced, free of charge. However, this warranty shall not cover any of the following malfunctions.

- ① Problem caused by not following to “For safe operation” in the operation manual.
- ② Malfunction or damage caused by operation or repairing other than the descriptions in the operation manual.
- ③ Malfunction or damage caused by any other product than the scroll dry vacuum pump.
- ④ Malfunction or damage caused by disassembling, remodeling or repairing the scroll dry vacuum pump by an unauthorized person.
- ⑤ Malfunction or damage caused by disasters.
- ⑥ Replacement of consumables.

This warranty shall be limited to the scroll dry vacuum pump. Therefore, any damage to the other products caused by a malfunction of this vacuum pump shall not be covered by the warranty. This warranty is valid only in Japan.

9.2 After-sales and service

Periodical inspection is recommended to use the scroll dry vacuum pump safely and efficiently. After the warranty period (one year or 8,000-hour operation), any inspection or the scroll dry vacuum pump requires a charge. In addition, malfunctions specified in the above preconditions require a charge for repair or trouble shooting even if the warranty period is not expired. When requesting repair, make a copy of the operating conditions **check sheet** on the next page and complete it. Then attach the complete sheet to the vacuum pump and send it to the service representative. However, please note that ULVAC KIKO cannot repair or inspect the vacuum pump if any gas prohibited in this manual or any gas that gives an adverse effect to the service person was sucked in the vacuum pump. The scroll dry vacuum pump is accurately and strictly manufactured. Contact the sales or service representative if the vacuum pump does not operate normally. Never attempt to repair it by yourself.

For any trouble of the system in which the scroll dry vacuum pump is installed, contact the manufacturer of the system for repair.

Vacuum Pump Check Sheet For Repair

(for disassembly, inspection and repair)

- ※ Please inform the following items completely for safety precautions against our maintenance staff. Fill in the item below and attached to the repair pump.

Date of issue : _____ Year _____ Month _____ Date _____

Customer's name : _____

Person in charge : _____

TEL : _____ FAX : _____

Representative Distributor : _____

Person in charge : _____

TEL : _____ FAX : _____

Product Name : _____ Serial No. (MFG. No) : _____

Purchased Date : _____ Year _____ Month _____

1. Request item

- ☐ Repair order during the warranty period (No Charge)
☐ Evaluation pump disassembly inspection required or inspection for pump required (No charge)
☐ Immediate repairing is required、 (Charge)
☐ Periodical inspection or over haul (Charge)
☐ Repair order is required and estimation is required before start repairing、

2. Trouble situation

- ☐ Unusual sound ☐ Pressure degradation ☐ Irregular action ☐ Others _____

3. Purpose of the usage (Device's name if necessary)

4. Evacuated gas (Type of the gas)

(1) Hazardous situations for injury ☐ Yes ☐ No

(2) Type of the gas・Name of the gas _____

5. Operational situation

(1) Operational elapsed time : _____ hr ☐ 24hrs consecutive operation
☐ On Off operation

(2) Installation place : _____

(3) Ambient temperature : _____

(4) Operational pressure : _____

6. Miserenious information. Please describe any information if necessary.

7. Send to

☐ Ulvac Kiko, Inc. CS Center. Yokohama Service Dep.

【Address】 1-10-4, Kitashinoyokohama, Kohoku-ku, Yokohama City, Kanagawa Prf, Japan

TEL:045-533-0509 FAX:045-533-0512

☐ Ulvac Kiko, Inc. CS Center. Miyazaki Service Dep.

【Address】 291-7, Chausubaru, Saito City, Miyazaki Prf. Japan

TEL:0983-42-4135 FAX:0983-43-2159

- ※ Use this paper by recopying for every information. When sending your information without this check sheet, repairing may not be acceptable.